If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM INSTALLATION INSTRUCTIONS **FOR SP88-28**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER

- 1) TR49-8, OE39-8, SP89-8 ONLY Remove head rest (see note)
- 2) Open velcro on the side seam to allow for fitting around armrest
- 3) Slip cover over backrest and pull down firmly
- 4) Fasten side velcro

- 5) Tuck flaps through crevice and attached to velcro at
- 6) Adjust all velcro to equalize tension
- 7) Replace headrests (see note)

B) **CUSHION COVER**

- 1) Center cushion cover on seat
- 2) Pass the front strap under the seat and buckle to the back flap of cover
- 3) TR49-8, OE39-8, SP39-8, TR47-23, OE37-23, SP87-23, TR47-27, OE37-27, SP87-27:
- Pass side straps through the opening between the molded plastic and the seat and buckle to back flap of cover
- 4) Adjust straps and buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

 
2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release
 - Lift off

OR

- B) Push in side release buttons
 - Lift off

(If unable to remove consult dealership)



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

7-6-09