

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING  
**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM  
INSTALLATION INSTRUCTIONS**

FOR  
TR49-33, OE39-33, SP89-33  
TR49-34, OE39-34, SP89-34

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) CUSHION COVER – BUCKETS / “40” PORTIONS**

- 1) Unhook back flap of the seat by removing elastic from the plastic clip under the seat
- 2) Center seat cover on seat
- 3) Pass the front strap under the seat, buckle to back flap of seat cover
- 4) Pass side straps through the opening between the molded plastic and the seat, buckle to back flap of cover
- 5) Adjust straps and buckles to equalize tension

**B) BACKREST COVER – BUCKETS / “40” PORTIONS**

- 1) Remove headrest (see note)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass attached velcro straps through crevice
- 4) Place velcro straps under the seat between cushion and metal frame and fasten
- 5) Re-install the elastic attached to the bottom back flap of the seat to the plastic hook under the seat
- 6) Place the elastic attached to seat cover to same plastic hook

**C) BACKREST COVER – “20” PORTION**

- 1) Remove headrest (see note)
- 2) Open zipper
- 3) Place cover over backrest under seat belt
- 4) Close zipper (see note)
- 5) With armrest down, open storage compartment
- 6) Position adhesive back velcro (supplied) to align with the velcro on cover.
- 7) Snug cover at back of storage compartment so the velcro on the cover is positioned through the crevice where the lid and storage compartment are hinged
- 8) Secure the velcro on the inside back of storage compartment

**D) CUSHION COVER – “20” PORTION**

- 1) Open cushion lid to up position
- 2) Center cover on the seat
- 3) Tuck the strap under cushion lid and buckle to back flap
- 4) Pull side velcro under cushion and apply
- 5) Adjust strap and velcro to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

(If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in base.  
B) Replace headrests

**4) ZIPPERS:**

- For ease in installation the zipper is longer than the cover.  
- Tuck excess zipper under cover

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

6-9-09