

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR42-44, Oe32-44, SP82-44

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – 60 PORTION:

- | | |
|--|-----------------------------------|
| 1) Remove head rest (see note) | 6) Fold down backrest |
| 2) Open zipper | 7) Close zipper (see note) |
| 3) Slip cover over backrest under center seat belt. | 8) Attach flaps to velcro at back |
| 4) Put armrest in down position | 9) Replace headrests (see note) |
| 5) Distribute the 12 pieces of self-adhesive velcro (supplied) evenly along the inside edge of the armrest well aligning with velcro on seat cover | |

B) BACKREST COVER – 40 PORTION:

- | | |
|--|-----------------------------------|
| 1) Remove headrest (see note) | 4) Fold down backrest |
| 2) Slip cover over backrest | 5) Attach flaps to velcro at back |
| 3) Tuck flaps through crevice under backrest | 6) Replace headrest (see note) |

C) CUSHION COVER – 60 PORTION:

- | | |
|---|--|
| 1) Center cover on the seat | 4) Pass side and front straps under seat |
| 2) Line up opening in seat cover under seat belt buckle. (DO NOT put seat belt buckle through hole in seat cover.) | 5) Fold the backrest down flat and buckle straps at back |
| 3) Tuck the back part of the cushion cover through the seat crevice | |

D) CUSHION COVER – 40 PORTION:

 
- | | |
|-----------------------------|----------------------------------|
| 1) Center cover on the seat | 2) Repeat steps 3 – 5 from above |
|-----------------------------|----------------------------------|

E) ARMREST COVER

- | | |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

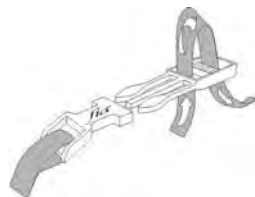

2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release

 
- Lift off

OR

B) - Push in side release buttons

- Lift off

(If unable to remove consult dealership)

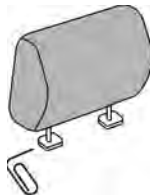

3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

4) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com