

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

TR42-45, OE32-45, SP82-45

TR42-48, OE32-48, SP82-48

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

The **Super Grip Buckles** are self-locking. For proper usage, see diagram (A)

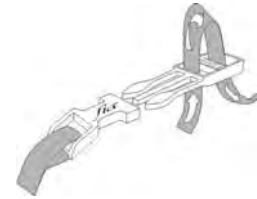


DIAGRAM A

### BACKREST COVER (S):

1. For better access, raise seat cushion(s) and hold in 3/4 upright position.  
**NOTE: FOR EASE IN INSTALLING REMOVE JACK BEFORE INSTALLING AND REPLACE AFTER INSTALLATION IS COMPLETE.**
2. Slip cover over backrest(s).  
**NOTE: REMOVE HEADRESTS BEFORE INSTALLATION. A) –INSERT PAPER CLIP INTO HOLES AT BASE TO RELEASE THEN LIFT OFF OR PUSH IN SIDE RELEASE BUTTONS THEN LIFT OFF. (IF UNABLE TO REMOVE, CONSULT DEALERSHIP)**  
  
**NOTE: WHEN INSTALLING BACKREST COVER ON SEAT WITH MIDDLE SHOULDER BELT STRAP, ENSURE THE SEAT COVER IS INSTALLED UNDER THE SEAT BELT STRAP ASSEMBLY. FOR EASIER INSTALLATION, THE CENTRE SEAT BELT CAN BE REMOVED. PLEASE CHECK WITH YOUR DEALERSHIP.**
3. Feed the back straps behind the seat so they go all the way down. Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. See diagram (B) and (C).
4. With seat cushion in down position reach through crevice where backrest and cushion meet. Bring straps forward and buckle at the front of the cover.
5. Push right bottom flap through crevice and hold at back of seat. With other hand, bring the side flap around and velcro to bottom flap. Repeat for opposite side. see diagram (D).
6. **TO RE-INSTALL HEADRESTS, ENSURE PRE-CUT HOLES IN SEAT COVER ALIGN WITH HOLES IN HEADREST BASE. REPLACE HEADRESTS**

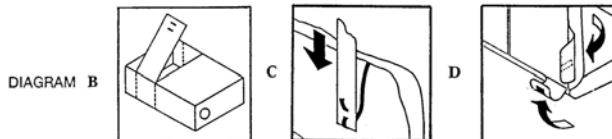


DIAGRAM B

C

D

### CUSHION COVER (S):

1. Center cover on the seat.
2. Pull seat cover tightly side to side so that the front and back flaps tuck under seat.
3. Pass the front straps under the seat and buckle to back flap.
4. Pass side straps around the back of seat and buckle.
5. Adjust all straps/buckles and velcro to equalize tension for a uniform fit.

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone: (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

3-26-09