

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR  
TR42-93

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER 40 side:**

- |   |   |
|---|---|
| 1) Remove headrests (see note below)    | 6) Tuck flaps through crevice under backrest                      |
| 2) Undo belt buckle from elastic holder | 7) Fold down backrest and attach flaps on velcro at back of cover |
| 3) Detach velcro closure on cover       | 8) Replace belt buckle on elastic on cover                        |
| 4) Slip cover over backrest             | 9) Replace headrests (see notes)                                  |
| 5) Attach velcro closure on cover       |   |

**B) BACKREST COVER 60 side:**

 
- |  |   |
|--|---|
| 1) Remove headrests (see note below)               | 6) Tuck flaps through crevice under backrest                      |
| 2) Undo belt buckle from elastic holder            | 7) Fold down backrest and attach flaps on velcro at back of cover |
| 3) Detach velcro closure on cover                  | 8) Replace belt buckle on elastic on cover                        |
| 4) Slip cover over backrest under center seat belt | 9) Replace headrests (see notes)                                  |
| 5) Attach velcro closure on cover                  |   |

**C) CUSHION COVERS X 2:**

- |   |  |
|---|--|
| 1) Center cover on seat                             | 5) Bring each end of strap sewn across cover under seat and buckle       |
| 2) Tuck back flap into crevice                      | 6) Pass the back straps under seat and buckle to front and side of cover |
| 3) Ensure the slit is in line with car seat hook up | 7) Adjust straps and buckle to equalize tension                          |
| 4) Lift seat in up position                         |  |


**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

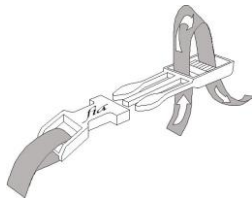

**2) HEAD REST REMOVAL:**

 - 1) Insert paper clip into hole at base to release
  - 2) Push in side release button
  - 3) Lift off
- (If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

10-03-13