



Addendum for adjusting the fuel pressure.

ADJUSTING THE FUEL PRESSURE

The pressure regulator located at the rear of the throttle body is factory set to 21 P.S.I. Slight adjustments from 18-21 P.S.I. may be necessary to allow for proper system operation.

1. Install a pressure gauge into the fuel supply line. This gauge must be removed after the fuel pressure has been properly adjusted.
2. Start the engine and verify the fuel lines do not leak. If any leaks are found, turn off the engine and repair the leaks before continuing.
3. Insert a 5/32" allen wrench into the pressure regulator screw on top of the throttle body.
4. Turn the screw into the throttle body to increase the fuel pressure or out of the throttle body to decrease the fuel pressure.

199R10502

Date: 6-15-09



Addendum for adjusting the fuel pressure.

ADJUSTING THE FUEL PRESSURE

The pressure regulator located at the rear of the throttle body is factory set to 21 P.S.I. Slight adjustments from 18-21 P.S.I. may be necessary to allow for proper system operation.

5. Install a pressure gauge into the fuel supply line. This gauge must be removed after the fuel pressure has been properly adjusted.
6. Start the engine and verify the fuel lines do not leak. If any leaks are found, turn off the engine and repair the leaks before continuing.
7. Insert a 5/32" allen wrench into the pressure regulator screw on top of the throttle body.
8. Turn the screw into the throttle body to increase the fuel pressure or out of the throttle body to decrease the fuel pressure.

199R10502

Date: 6-15-09