

JKS[®]

Installation Instructions



Product: **Adjustable Lower Control Arms**

Part Number: **PN 6155**

Application: **Jeep Wrangler JK, 2007+ (rear only)**

Welcome

CONGRATULATIONS on purchasing a set of new Adjustable Control Arms from JKS Manufacturing. We are committed to providing you with the best products available and your satisfaction is our first priority.

PLEASE READ these Installation Instructions carefully, and save them for future reference, as they contain important installation and maintenance information.

Important

SUSPENSION COMPONENTS THAT HAVE RUBBER BUSHINGS must be tightened with vehicle on level ground and at normal ride height. The springs must be supporting weight of vehicle when the hardware is torqued.

RUBBER BUSHINGS MUST NEVER BE LUBRICATED, as doing so will impair performance and longevity.

COMPATIBLE WITH original 4-link suspension configuration and vehicle ride height up to 6.0”.

REFER TO FACTORY SERVICE MANUAL for information and procedures not covered in these instructions.

Tools Required

- Hydraulic Floor Jack and Jack Stands
- Metric/Standard Socket Wrench Set
- Torque Wrench
- Tape Measure
- Anti-Seize Lubricant
- Hand-Pump Grease Gun
- Moisture Resistant Marine Style Grease
- Heavy Duty Ratchet Strap *
- Factory Service Manual (recommended)

* Asterisk denotes tools that are not required for some applications. Thoroughly read instructions to determine which tools will be required for your application.



ATTENTION INSTALLER

Install Adjustable Control Arms **ONE AT A TIME** for easiest alignment of mounting hardware.

Installation

- 1. **REMOVE ORIGINAL LOWER SUSPENSION ARM**
 - Raise and support the vehicle chassis with jack stands positioned in front of the rear lower suspension arm brackets.
 - Raise the axle housing back into position and support with a hydraulic jack. **HINT:** The axle housing should be evenly supported and the suspension at normal ride height. Do not attempt removal or installation with the suspension extended, or the axle drooped, as this will place tension on suspension arm mounting hardware.
 - Remove the lower suspension arm bolt and nut from the axle housing bracket. Retain the original mounting hardware.
 - Remove the bolt and flag nut from the chassis rail bracket. Retain the original mounting hardware.
 - Remove the original lower suspension arm from the vehicle.

❑ 2. SET CONTROL ARM LENGTH

Adjustable Control Arms are fully collapsed when supplied from JKS and must be adjusted to the desired lengths before installation.

The working length of each lower Control Arm can be increased (up to 2.625" longer), decreased (up to 0.75" shorter), or exactly the same as the OE suspension arm.

- Determine ideal Control Arm length for your application by considering factors such as:
 - Length of OE suspension arm
 - Tire Clearance
 - Pinion Angle
- Rotate adjustable end of Control Arm until the desired length is achieved.
- Adjust corresponding Control Arm to exact same length.

❑ 3. INSTALL CONTROL ARM

- Apply anti-seize lubricant to bolt threads of original mounting hardware.
- Mount the non-rotating (BLACK) end of Adjustable Control Arm to the chassis rail bracket.
- Install the original mounting bolt and flag nut. Finger tighten the bolt. **DO NOT torque mounting hardware until instructed.**
- Mount the rotating (GOLD) end of Adjustable Control Arm to the axle housing bracket with the greaseable fitting facing up.
- Install the original mounting bolt and finger tighten the nut. **DO NOT torque mounting hardware until instructed.**

HINT: *If mounting bolt is difficult to install due to misalignment of Control Arm bushing with mounting bracket, either (1) adjust height of axle housing with hydraulic jack, (2) move axle housing into position with a heavy-duty ratchet strap, or (3) temporarily disconnect track bar until mounting holes align.*

❑ 4. TIGHTEN MOUNTING HARDWARE

- Once both Adjustable Control Arms have been properly installed, lower the vehicle to the ground until coil springs are supporting the full weight of vehicle.
- Using a torque wrench, tighten all mounting hardware to 125 ft-lbs.

❑ 5. POST-INSTALLATION INSTRUCTIONS

- Adjustable Control Arms are supplied pre-lubricated, although it will be necessary to add more grease after they have been adjusted and installed on the vehicle. *Refer to **Maintenance** section for specific lubrication instructions.*

Maintenance

Control Arms should be greased regularly as part of vehicle maintenance schedule. Lubricate using moisture resistant marine style grease and a hand-pump grease gun. DO NOT use a pneumatic grease gun. Add grease slowly until resistance is felt. The internal spring-loaded seal can be damaged by forcing too much grease into Control Arms.

© 2009 JKS Manufacturing, Inc & Aftermarketing, LLC
Revision Date 2/4/2010