



ADCT2 2 Channel, Adjustable, Line Output Converter (LOC) with Built-in Amplifier Remote Generator

Adjusting the ADCT2 for maximum performance: After completing all of the necessary connections, turn the ADCT2 adjustment pots all of the way down by rotating them completely counter-clockwise. Now, turn the stereo system on and adjust the main volume control on the stereo to approximately 3/4 maximum volume. Select one of the adjustment pots on the ADCT2 and turn it slowly clockwise until you notice audio distortion and then stop. Turn the remaining pot to the same position as the previously adjusted pot. The audio set-up of the ADCT2 is now complete and ready to be enjoyed.





ADCT2 2 Channel, Adjustable, Line Output Converter (LOC) with Built-in Amplifier Remote Generator

Adjusting the ADCT2 for maximum performance: After completing all of the necessary connections, turn the ADCT2 adjustment pots all of the way down by rotating them completely counter-clockwise. Now, turn the stereo system on and adjust the main volume control on the stereo to approximately 3/4 maximum volume. Select one of the adjustment pots on the ADCT2 and turn it slowly clockwise until you notice audio distortion and then stop. Turn the remaining pot to the same position as the previously adjusted pot. The audio set-up of the ADCT2 is now complete and ready to be enjoyed.





## ADCT2 2 Channel, Adjustable, Line Output Converter (LOC) with Built-in Amplifier Remote Generator

Adjusting the ADCT2 for maximum performance: After completing all of the necessary connections, turn the ADCT2 adjustment pots all of the way down by rotating them completely counter-clockwise. Now, turn the stereo system on and adjust the main volume control on the stereo to approximately 3/4 maximum volume. Select one of the adjustment pots on the ADCT2 and turn it slowly clockwise until you notice audio distortion and then stop. Turn the remaining pot to the same position as the previously adjusted pot. The audio set-up of the ADCT2 is now complete and ready to be enjoyed.





ADCT2 2 Channel, Adjustable, Line Output Converter (LOC) with Built-in Amplifier Remote Generator

Adjusting the ADCT2 for maximum performance: After completing all of the necessary connections, turn the ADCT2 adjustment pots all of the way down by rotating them completely counter-clockwise. Now, turn the stereo system on and adjust the main volume control on the stereo to approximately 3/4 maximum volume. Select one of the adjustment pots on the ADCT2 and turn it slowly clockwise until you notice audio distortion and then stop. Turn the remaining pot to the same position as the previously adjusted pot. The audio set-up of the ADCT2 is now complete and ready to be enjoyed.

