

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 30-35 ft-lbs for U-bolt clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW: 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688 | 1(800) 990-0905 Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com

INSTALLATION INSTRUCTIONS



Step 1. To remove the OEM exhaust begin by cutting the tubing approximately 2.00" behind the weld on the catalytic converter. Once cut, working front to rear, disengage the hangers from the rubber insulators and remove the system. Do not damage or discard the rubber insulators as they will be re-used to install the new Magnaflow system.



Step 2. To install the new Magnaflow exhaust system begin by attaching the Resonator Assembly to the cut and de-burred outlet of the OEM system using the supplied 2.36" clamp. Leave all clamps loose until final adjustment of the system.



Step 3. Next attach the Mid-Pipe to the Resonator Assembly using a 2.50" clamp.



Step 4. Complete the installation by attaching the Muffler Assembly to the Mid-Pipe using a 2.50" clamp and fitting the hangers into the rubber insulators.

MAGNAFLOW: 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688 | 1(800) 990-0905 Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com



Step 5. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.