

MSD IGNITION[®] INSTALLATION INSTRUCTIONS

LSx Trigger Converter PN 6301

Parts Included:

- 1 - LSx Trigger Converter
- 1 - LS2/LS7 Adapter Harness

The PN 6301 is designed to convert the factory LSx crank trigger signal to a 12 volt square wave signal that will trigger a conventional MSD 6 or 7-Series Ignition Control. The Converter is programmed for use on an LS2/LS7 with a 58-tooth, 5 volt signal. It can also be used with LS1/LS6 (24-tooth, 12 volt signal) by cutting the Red wire loop (Figure 2).

TIMING ADJUSTMENT

There are two rotary dials in the Converter that provide adjustment of the timing from TDC to 50° BTDC. The timing is adjustable in one degree increments.



Figure 1 Timing Adjustment.

LED

The LED indicates that the Converter is connected and functioning when it is illuminated.

WIRING

RED	Connects to switched 12 volt source.
BLACK	Connects to ground, chassis or engine.
YELLOW	Connects to the White (points) input of the MSD Ignition.
RED LOOP	Crank Trigger Select Loop. Programmed for LS2/LS7 engines with a 58-tooth, 5 volt signal. Cut this loop when used on LS1/LS6 engines with a 24-tooth, 12 volt signal.

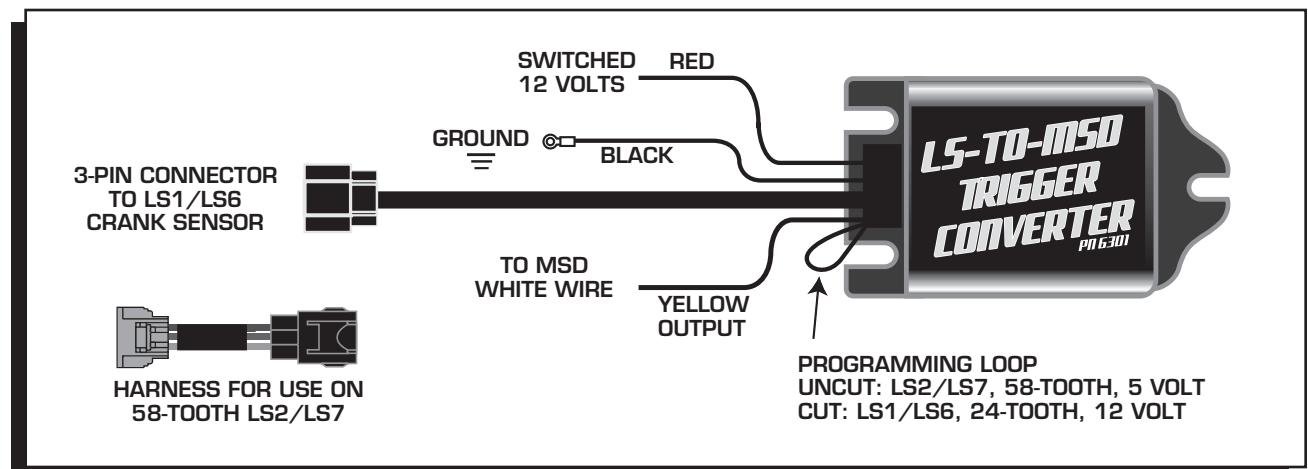


Figure 2 Wiring the Trigger Converter.

MSD[®] IGNITION

INSTALLATION INSTRUCTIONS

The Crank Trigger Sensor is located on the rear passenger side of the block, just above the starter (Figure 3).



Figure 3 Crank Trigger Sensor Location.

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

All returns must have a Return Material Authorization (RMA) number issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at www.msdisignition.com/rma to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.