

## MSD Firewall Feed-Thru PN 8211 AND PN 8212

### Parts Included In This Kit:

1-Firewall Feed-Thru

1. Choose a clear, flat location on the firewall, away from hot exhaust temperatures, for mounting the Firewall Feed-Thru. Remember, the shorter the coil wire the less chance for spark loss.
2. At the center of the chosen location, make a 1 inch diameter hole using either a hole-saw or a knock-out punch.
3. Place the Firewall Feed-Thru in the 1" hole and mark the centers of the 4 mounting holes. You may also use Figure 1 as a template. Remove the Firewall Feed-Thru.
4. If the firewall is thick enough (1/4" or more), you can drill the 4 holes with a #29 drill bit and then tap them for 8-32 size screws.

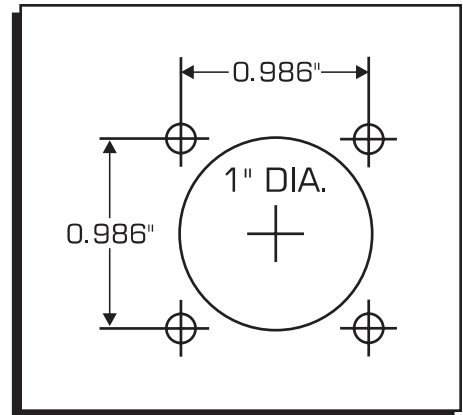


Figure 1

If the firewall is made of a thin piece of sheet metal or aluminum, you will have to use screws with nuts on the back. In this case, drill the 4 mounting holes with #15 drill bit and use #8 screws with the proper nuts.

5. Install the Firewall Feed-Thru in the 1" hole using the mounting method that you selected. The flange can go either side of the firewall as long as it seats against a flat surface. When you tighten the screws, use Loctite and be careful not to crush the plastic. For a waterproof installation, squirt a little silicon on the flange before tightening the screws.

6. Connect one coil wire from the distributor to the Firewall Feed-Thru and another coil wire from the Feed-Thru to the coil. You must use 90 degree spark plug style (HEI style) boots and terminals for connections on both ends of the Firewall Feed-Thru. See Figure 2.

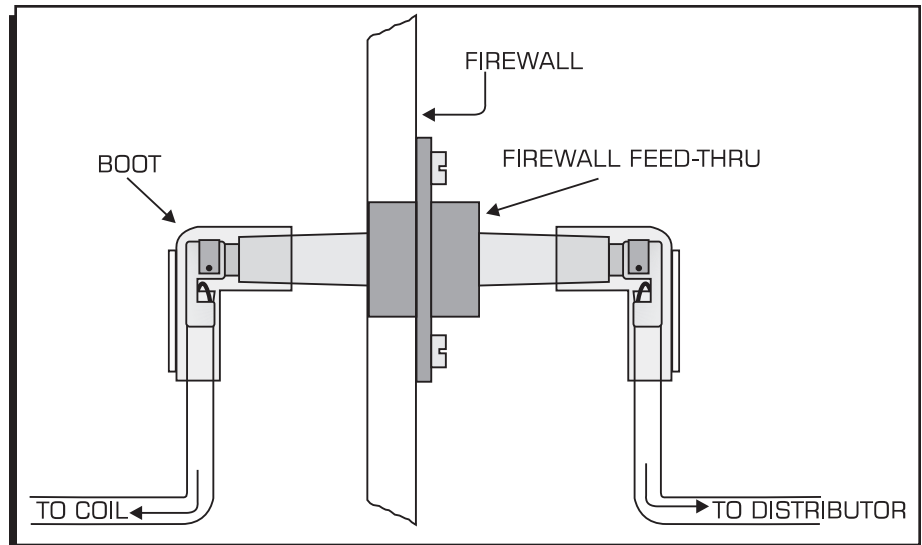


Figure 2



# INSTALLATION INSTRUCTIONS

## TECH NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

### Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

**All returns must have a Return Material Authorization (RMA) number** issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at [www.msdisignition.com/rma](http://www.msdisignition.com/rma) to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

### Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use\*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

\*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.