

HEI Dust Cover Conversion for a Blaster 2 Coil PN 8401

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Parts Included:

- 1 MSD HEI Dust Cover
- 1 Y-spliced Pink Wire
- 1 Brown Wire

The PN 8401 Dust Cover allows the use of an external Blaster 2 coil with an internal coil GM HEI distributor.

INSTALLATION

- 1. Disconnect the 3-pin wiring harness and the single Pink wire connector from the distributor cap.
- 2. Remove the dust cover from the original coil and remove the internal coil.

Note: Leave the rotor bushing in place.

- 3. Install the MSD Dust Cover using the original screws.
- 4. Connect the supplied Brown wire to the Brown wire of 3-pin distributor connector. Connect the other end of the Brown wire to the coil negative (-) terminal.
- 5. Connect the supplied Y-Spliced Pink wire to the single Pink wire (switched 12 volts) and the Pink wire of the 3-pin distributor connector. Connect the other end to the coil positive (+) terminal.

Note: The middle terminal of the 3-pin connector (Black wire) is not used.

6. Install the coil wire to the Cover.

Note: If you plan to install a tachometer, the trigger wire connects to the coil negative terminal.

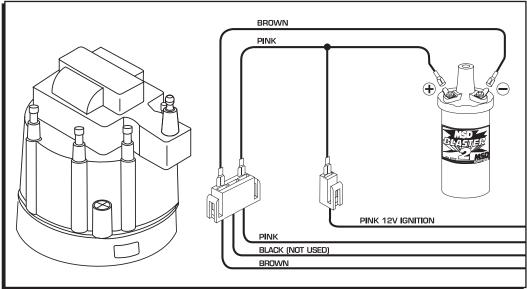


Figure 1 Wiring Diagram.

INSTALLATION INSTRUCTIONS

Notes

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

All returns must have a Return Material Authorization (RMA) number issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at www.msdignition.com/rma to automatically obtain a number and shipping information. When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.

MSD IGNITION • WWW.MSDIGNITION.COM • (915) 857-5200 • FAX (915) 857-3344 © 2007 Autotronic Controls Corporation FRM28677 Revised 06/07 Printed in U.S.A.