



## Updating your SCT device firmware

Step 1: You must download and install SCT's Device Updater software & the latest device firmware. Both can be downloaded in the Tech Support / Device Updates & Download section of the [www.sctflash.com](http://www.sctflash.com)

### Step 2:

Open the SCT Updater Software and click on the Update Firmware button to begin.



### Step 3:

Select the device you are updating by clicking on the image of the device.



### Step 4:

Click on the Browse button and select the firmware file downloaded earlier. Once the file has been selected, the transfer of the new firmware will begin. Once finished, follow the instructions below the Browse button on loading the firmware.

