

# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**

## **MSD Replacement APS Starter Solenoid Standard Chevy Solenoid, PN 5087 LS-Series Solenoid, PN 5086**

1. Disconnect the main wire between the solenoid and the housing.
2. Remove the two Allen head screws that secure the solenoid to the housing. Note that the solenoid is spring loaded and there may be spacers between the housing and the solenoid.
3. Pull the solenoid off the plunger by pulling up on the front of the solenoid as shown in the Figure. This will help separate the plunger and lever from the solenoid while keeping them attached to the starter. Use caution to keep the coil spring and plunger attached to the starter.
4. Install the new solenoid using the same spacers. Use care not to remove the plunger from the armature.
5. Install the two Allen head screws and connect the main wiring lead from the housing to the solenoid.



**MSD IGNITION** • [WWW.MSDIGNITION.COM](http://WWW.MSDIGNITION.COM) • (915) 857-5200 • FAX (915) 857-3344  
© 2009 Autotronic Controls Corporation  
**FRM29603** Created 04/09 Printed in U.S.A.

# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**

## **MSD Replacement APS Starter Solenoid Standard Chevy Solenoid, PN 5087 LS-Series Solenoid, PN 5086**

1. Disconnect the main wire between the solenoid and the housing.
2. Remove the two Allen head screws that secure the solenoid to the housing. Note that the solenoid is spring loaded and there may be spacers between the housing and the solenoid.
3. Pull the solenoid off the plunger by pulling up on the front of the solenoid as shown in the Figure. This will help separate the plunger and lever from the solenoid while keeping them attached to the starter. Use caution to keep the coil spring and plunger attached to the starter.
4. Install the new solenoid using the same spacers. Use care not to remove the plunger from the armature.
5. Install the two Allen head screws and connect the main wiring lead from the housing to the solenoid.



**MSD IGNITION** • [WWW.MSDIGNITION.COM](http://WWW.MSDIGNITION.COM) • (915) 857-5200 • FAX (915) 857-3344  
© 2009 Autotronic Controls Corporation  
**FRM29603** Created 04/09 Printed in U.S.A.