



INSTALLATION INSTRUCTIONS

MSD Rotor for Honda/Acura Engines PN 8090/PN 8092

Parts Included:

- 1 - Rotor
- 1 - Screw and Lock Washer

The MSD Rotor will install to stock Honda/Acura distributors with a factory style cap or with MSD's line of Extreme Power Caps. Consult the chart below to confirm that you have the correct rotor for your application. It is recommended to install a new distributor cap with the rotor. MSD's caps are listed in the chart in Figure 1.

Year	Model	Engine	Notes	Rotor	DISTRIBUTOR CAPS			
					Black	Red	Extreme	OE Extreme
ACURA					PN 8291			
'97 (Only)	CL	2.2L	w/Hit. Dist.		PN 8291			
'98-'99	Acura CL	2.3L	w/Hit. Dist.		PN 8294			
'88-'91	Integra	1.6L/1.8L	w/Tec Dist.	PN 8090	PN 8290	PN 82901	PN 82902	PN 8295
'92-'93	Integra (All)	1.7L/1.8L	w/Tec Dist.		PN 8292	PN 82921	PN 82922	PN 8296
'94-'01	Integra GS, LS, RS	1.8L	w/Tec Dist.	PN 8092	PN 8292	PN 82921	PN 82922	PN 8296
'94-'01	Integra GS-R/Type-R	1.8L	w/Tec Dist.	PN 8092	PN 8293			
HONDA								
'90-'91	Accord	2.2L	w/Tec Dist.		PN 8292	PN 82921	PN 82922	PN 8296
'94-'97	Accord EX	2.2L	w/Hit. Dist.		PN 8291			
'98-'02	Accord DX (Only)	2.3L	w/Tec Dist.	PN 8092	PN 8292	PN 82921	PN 82922	PN 8296
'98-'02	Accord EX, LX, SE	2.3L	w/Hit. Dist.		PN 8294			
'88-'91	Civic, CRX	1.5L/1.6L	w/Tec Dist.	PN 8090	PN 8290	PN 82901	PN 82902	PN 8295
'93-'97	Civic Del Sol	1.5L/1.6L	w/Tec Dist.	PN 8092	PN 8292	PN 82921	PN 82922	PN 8296
'92-'00	Civic/Si (Exc. '96-'00 HX)	1.5L/1.6L	w/Tec Dist.	PN 8092	PN 8292	PN 82921	PN 82922	PN 8296
'96-'00	Civic HX (Only)	1.6L	w/Hit. Dist.		PN 8291			
'97-'01	CRV	2.0L	w/Tec Dist.	PN 8092	PN 8292	PN 82921	PN 82922	PN 8296
'95-'97	Odyssey	2.2L	w/Hit. Dist.		PN 8291			
'98 (Only)	Odyssey	2.3L	w/Hit. Dist.		PN 8294			

Figure 1 Rotor Application Chart.

1. Remove the distributor cap. If you choose to remove the spark plug wires, be sure to mark their location on the cap.
2. For the PN 8090 Rotor, you will need to remove the distributor's dust cover (Figure 2).
3. For the PN 8092 Rotor you may need to rotate the engine to access the rotor retaining screw. Once the screw is accessible, remove it and pull the rotor off (Figure 3).
4. Install the MSD Rotor and the retaining screw with washer. Install the distributor cap.

FOR PN 8090 ONLY



Figure 2 Removing Dust Cover

ROTOR RETAINING SCREW



Figure 3 Replacing the Rotor.

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

All returns must have a Return Material Authorization (RMA) number issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at www.msdisignition.com/rma to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.