

AEM® **INSTALLATION INSTRUCTIONS**

Part Number: 28-20118


This filter fits: See current AEM® catalog for current applications

With proper care, this filter will last the life of your vehicle. This filter may be used in a stock machine, and no modifications will be required. However there are special installation instructions, so please follow the procedures outlined below to ensure that the AEM® air filter seals properly.

INSTALLATION:

- 1) Remove the airbox lid by releasing the two hold down clips.
- 2) Remove the stock air filter.
- 3) Wipe any dirt out of the lid and base. The airbox lid must be clean and dry so that the gasket will stick to it.
- 4) Apply the supplied self-sticking gasket around the edge of the airbox lid. (Fig 1)
- 5) Install the AEM® Air Filter.
- 6) Re-install the airbox lid and clamp down the holding clips

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

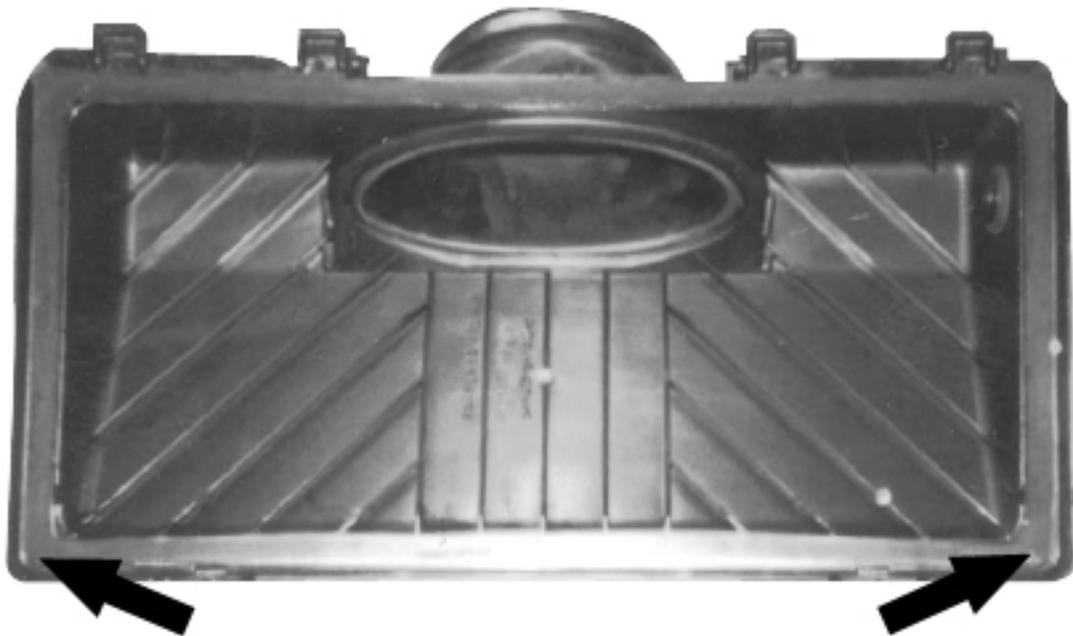

Apply gasket to edge of airbox