



Completely read all the instructions before installation
Improper installation will void warranty

Step 1



Tools needed:
10mm Socket
Phillips Screw Driver

Step 2



Remove the four 10mm bolts located on the top of the grille.

Step 3



Using the phillips screw driver push down and unlock the three clips located on the bottom of the grille.

Step 4



Carefully unhitch and remove the grille.

Step 5



Remove the 10mm bolt located on the top of the OEM headlight housing.

Step 6



Remove the two 10mm bolts located on the side of the OEM headlight housing.

Step 7



Remove the 10mm bolt located on the bottom of the OEM headlight housing.

Step 8



Carefully pull out the OEM headlight and expose the parking and turn signal power sources.

Step 9



Remove the OEM headlight by disconnecting the parking and turn signal power sources.

Step 10

Step 11

Step 12



Remove the Anzo headlight out of its box.



You can adjust the level of the light by adjusting the screw located directly above the Anzo headlight housing.



Install the Anzo headlights by reversing steps 2 to 9.

Step 13



Test all functions before operating the vehicle.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards are not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.

