

Full color instructions can be viewed on our web site at Airaid.com. If you need <u>any</u> assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.



**1.** <u>Disconnect the negative battery cable.</u> Using a 10mm socket, remove the three bolts securing the engine beauty cover, remove the cover, and set it aside (save the bolts and cover for reuse).



**2.** Loosen the hose clamps at the throttle body, and air filter housing outlet.



For Part Numbers:

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11.

12. 13.

14.

15. 16. 17.

18.

| 400-109 | 700-420 Airaid Oiled Media Filter          |
|---------|--|
| 401-109 | 701-420 SynthaMax Dry Media Filter - Red   |
| 402-109 | 702-420 SynthaMax Dry Media Filter - Black |

1997- 04 Expedition 4.6, 5.4L 1997- 03 F-150 4.6, 5.4L 2004 F-150 4.6, 5.4L "Heritage" (16 valve)


INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECFIC VEHICLE.

## **Component Identification**

|           | remium Filter           |
|-----------|-------------------------|
| Airaid Ir | itake Tube              |
| MAF Br    | acket                   |
| Urethane  | e Hump Hose             |
| Urethane  | e Reducer Hose          |
| 5/8" x 18 | 3" Breather Hose        |
| 3/4" x 12 | 2" L-Hose               |
|           | 1/4- 20x 7/8" Hex Bolts |
|           | 1/4" Flat Washer        |
|           | 1/4-20" Nylock Nuts     |
|           | MAF Gasket              |
|           | MAF Backing Plate       |
|           | #60 Hose Clamp          |
|           | #52 Hose Clamp          |
|           | 7/16" Rubber Grommet    |
|           | Black Speed Clamp       |
|           | Black Speed Clamp       |
|           | Airaid Decal            |
|           |                         |



**3.** Remove the crankcase breather hose from the factory intake tube and the valve cover. Disconnect the Air Intake Temperature (AIT) sensor wiring harness from the sensor. (4.6L Engine only: Disconnect the Idle Air Bypass Valve (IABV) inlet tube from the factory intake tube.) (5.4L Engine only: disconnect the IABV, save the plastic hose for reuse.)

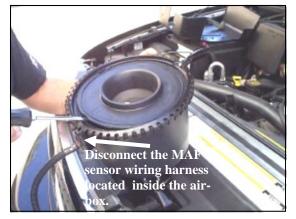

**6.** Locate the notch on the flat side of the airbox and gently pry it up. Disconnect the **MAF** sensor wiring harness from the sensor (inside the airbox).




**4.**) Remove the factory intake tube, and set it aside. Remove the **AIT** sensor from the tube by carefully prying it out with a flat blade screwdriver (save the sensor for reuse). Disconnect the **M**ass **Air Flow** 




**5.** The factory airbox assembly is held in place by rubber grommets (it is a "pull to release fit."). Remove the assembly and grommets from the engine compartment. Unlatch the airbox and separate the

(MAF) sensor wiring harness from the main engine wiring harness.

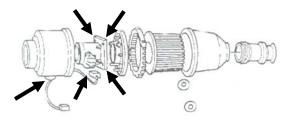


**7.** Using a 10mm socket, remove the four **MAF** sensor mounting nuts. Carefully remove the **MAF** sensor and the wiring harness from the airbox, (save them for reuse).


two sections. Remove the wire loom from the **MAF** sensor wiring harness, then slide the grommet away from the connector.

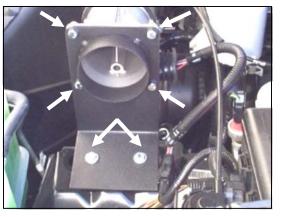


**8.** Mount the **MAF** sensor to the MAF bracket (#3) using four 1/4-20x 7/8" hex bolts (#8), 1/4-20" nylock nuts (#10), and the MAF gasket (#11). Mount the bracket and sensor to the factory location, using the MAF backing plate (#12), two 1/4-20x 7/8" hex bolts (#8), four 1/4" flat washers (#9), and two 1/4- 20" nylock nuts (#10). (Leave the MAF bracket loose for now).

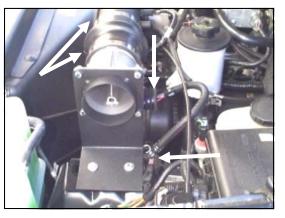

**9.** Reconnect the **MAF** sensor wiring harness to the sensor, and to the main engine wiring harness. Install the urethane hump hose (#4) onto the **MAF** sensor, with two #60 hose clamps (#13). Tighten only the clamp on the sensor.

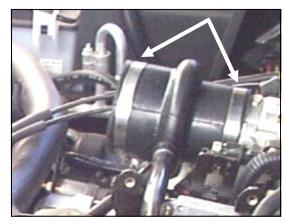

**10.** Install the small side of the urethane reducer hose (#5) onto the throttle body using one #52 hose clamp (#14). Install one #60 hose clamp (#13) onto the larger side of the reducer hose. Tighten only the clamp on the throttle body.

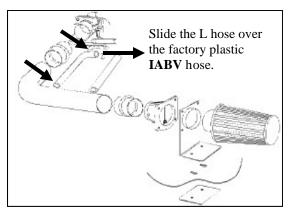


13. <u>5.4L engines</u>: Measure and cut the 3/4 x 12" L-hose (#7) as needed, then slide it over the factory plastic **IABV** hose. Install the hose onto the Airaid Intake Tube nipple and secure it using two #22 speed clamps (#17).



16. Install the Airaid Premium Filter (#1) onto the MAF bracket, and tighten the clamp. Reinstall the beauty cover using the three factory bolts.




11. Install the 7/16" rubber grommet (#15) into the Airaid Intake Tube (#2). Insert the factory AIT sensor into the grommet. Slip the Airaid Intake Tube into the urethane hump and reducer hoses. Align for best fit and tighten the remaining hose clamps. Tighten the MAF bracket and reconnect the AIT sensor wiring harness. Apply the Airaid Bubble Decal onto the Intake Tube

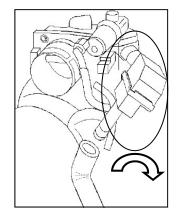

14. <u>4.6L engines</u>: Rotate the *IABV* inlet tube 90 degrees to provide clearance for the 3/4 x 12" Lhose (#7).



12. Install the 5/8"X18" breather hose (#6) onto the valve cover breather fitting then onto the Airaid Intake Tube nipple. Secure the hose using two #19 speed clamps (#16).

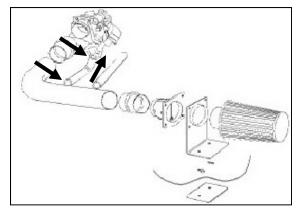

15. <u>4.6L engines continued</u>: Connect the Airaid Intake Tube nipple to the *IABV* inlet tube using the 3/4 x 1/2" L-hose (#7), and two #22 speed clamps (#17).

### **17. Double check your work!**

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight.

18. Reconnect the negative battery cable!

Full color instructions can be viewed on our web site at Airaid.com. Use the **Product Search** function to find your part number, and click **View Details**.

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILTY! The air filter is reusable and should be cleaned periodically.

#### FILTER IDENTIFICATION

700-420 Airaid Oiled Media

702-420 Airaid SynthaMax Dry Media - Black

701-420 Airaid SynthaMax Dry Media - Red

For your Oiled media filter we suggest

## using the AIRAID Filter Tune-Up Kit!



P/N 790-551 Aerosol Spray

P/N 790-550 Squeeze Spray



**INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH** PART FOR A SPECFIC VEHICLE.



# **Do Not Oil**

Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

AIR-I40109B

Airaid. 1815 West Crest Lane. Phoenix AZ 85027 (800) 498-6951 AiraidInfo@airaid.com www.airaid.com

REV07.05.16