


Vehicle Application:


- Chevrolet Gl i YfUXc/GMC GlYffU
- 2500/3500 6.8' bed 2020-Current
- Part Number: 19243

www.Bestop.com - We're here to help! Visit our web site and click on "Ask a Question". Click here for more Truck Accessories by Bestop.

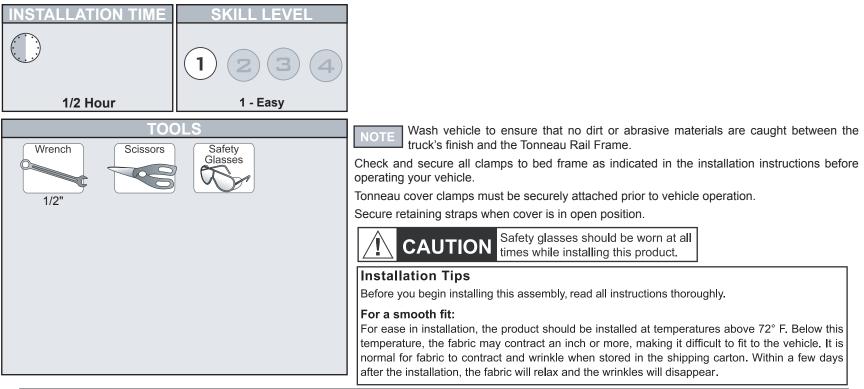

WARNING The buckle of each retaining strap and both clamps must be fastened securely to avoid damage to personal property or possible personal injury.

If the vehicle has an Over-the-Rail Bedliner, use a certified installer to perform the initial installation. Modifications to the Bedliner may be required.

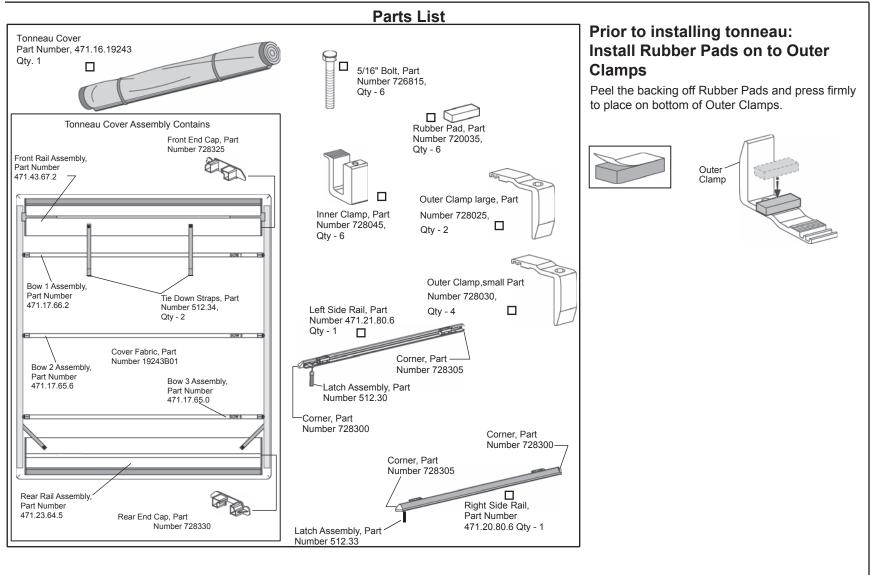


Rev. C 1024

5/16" Bolt




Use a 5/16" Bolt to secure an Outer Clamp to an Inner Clamp. Repeat for six (6) assemblies.

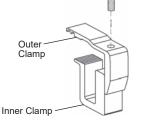

## Place Side Rails on Bed


Locate the 2 side rails. Remove the protective tape on the bottom of each rail and place the rail on the bed on each side of the vehicle.


Once the rails are on the bed, align the front edge of each Side Rail, with the inside edge of the front bulkhead.

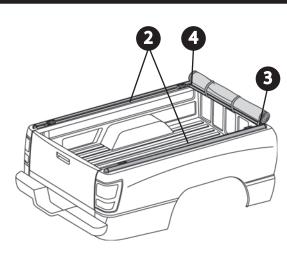


#### 3 Secure Tonneau Cover Assembly to Passenger Side Rail

 
Place the Tonneau Cover Assembly into the front pivot on the Passenger Side Rail. Engage the cover assembly latch into the slot on the Side Rail. Make sure that the cover assembly is ush against the Side Rail.

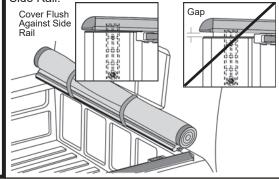



Place the Driver's Side Rail into the Tonneau Cover Assembly. Make sure the cover assembly latch is fully engaged into the slot on the Side Rail and that the cover assembly is ush against the Side Rail.

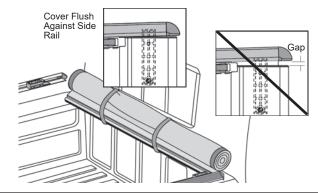

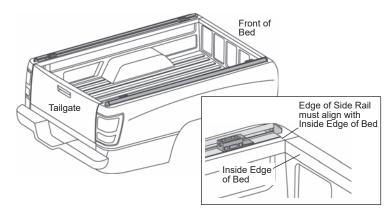



### Place Clamps


Place the 2 large front clamps on the Side Rail 6" behind the front pivot mount. Place the small rear clamps 6" in front of the rear pivot mount. Locate the center of the Side Rail and place the center small clamps either 6" in front of this point or 6" behind it as needed for your vehicle.

Do Not Tighten the Clamps at this time.


Repeat on both sides of the vehicle.


NOTE

Clamp positions may vary depending on any bed accessories you may have.

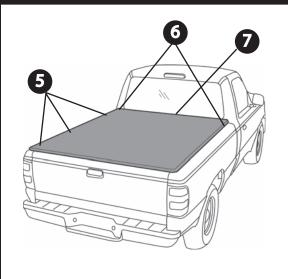

**6** Un-do Straps Un-do the Tie Down Straps.

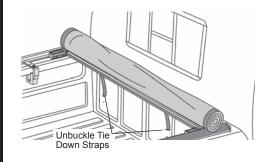

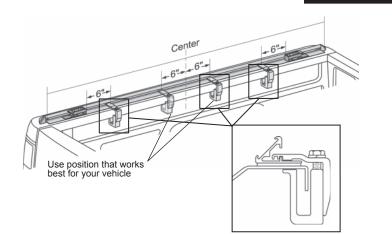



#### 7 Center Tonneau Frame

With the Tonneau Cover Assembly latched on both sides, push both Side Rails in so they are flush with the Front Rail. Center the front of the Frame from side to side on the vehicle.




For proper function, it is best to leave a 1/8" gap between the Side Rail and the Front Rail.

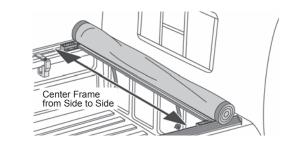

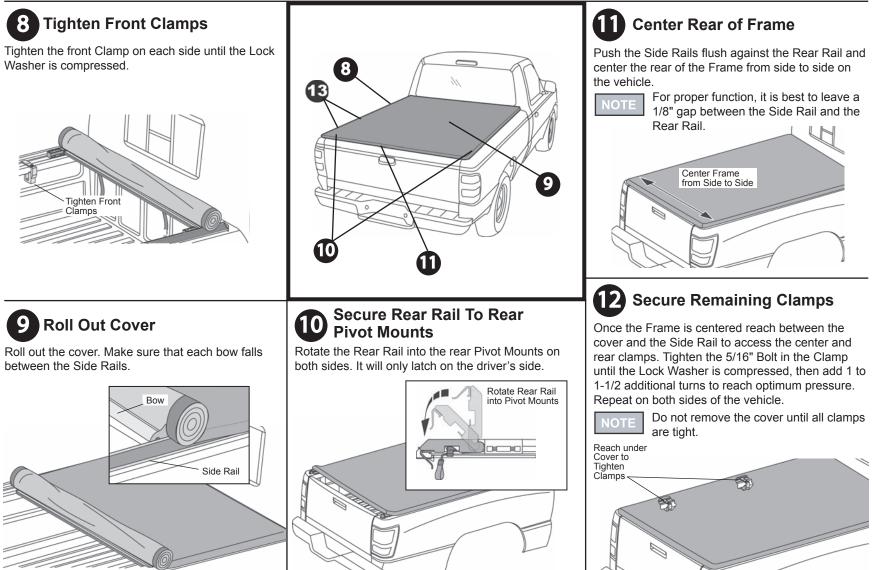


Rev. C 1024

19243 pg. 5

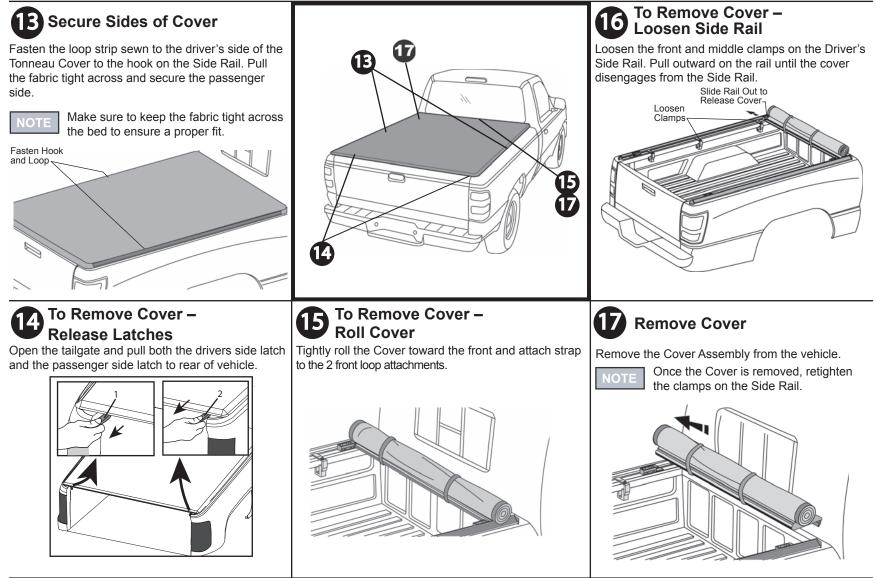

19243 pg. 6

Rev. C 1024

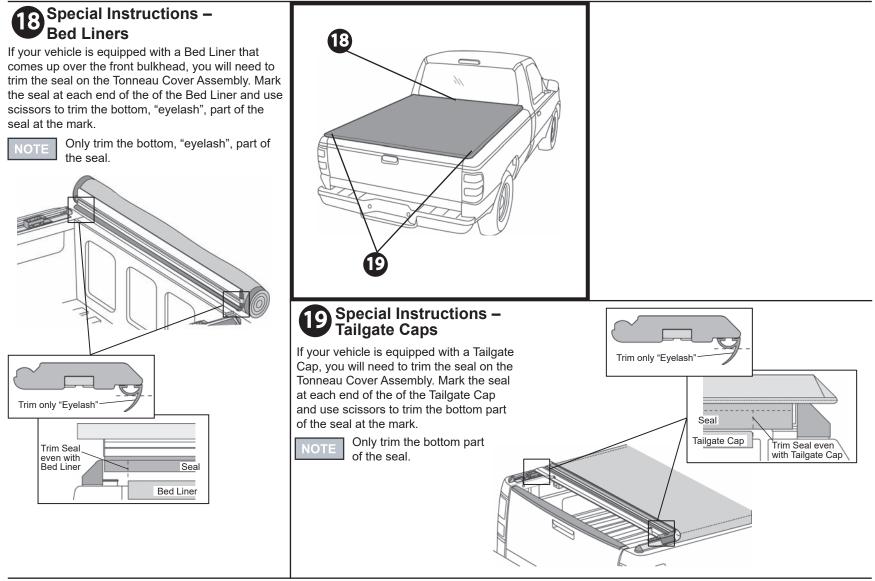



# **Care and Maintenance of your Bestop Product**

Your Bestop product is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.

**Fabric:** The fabric should be washed often using soap, warm water and a soft bristle brush Rinse with clear water to remove all traces of soap. Bestop recommends using Bestop Cleaner (part no. 11201-00) and Bestop Protectant (part no.11202-00) for Vinyl fabric and Bestop Twill Protectant (part no. 11207-00) for Twill fabric. Bestop Cleaner and Bestop protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner safely removes the toughest stains, will not harm vehicle finishes, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening, and repels dust, grease, dirt and mildew.

**Windows:** Keep windows clean to avoid scratching. DO NOT use a brush on the windows! Wash with a water-soaked cloth or sponge and a mild dishwashing detergent. Bestop recommends Bestop Vinyl Window Cleaner (part no. 11203-00), which safely cleans and protects vinyl windows and helps prevent UV damage. NEVER WIPE THE WINDOWS WHEN THEY ARE DRY. Be careful when cleaning snow or frost from the vinyl windows since they are easily scratched and may crack at low temperatures. DO NOT roll the sides or rear window in cold weather. The windows become stiff and will crack. Cracks caused by misuse in cold temperatures are not covered under warranty.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams.

 
**Snaps:** Keep snaps cleaned and lubricated with silicone to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and GENTLY pry apart to prevent permanent damage to the snap or the top fabric.

**Zippers:** Keeping zippers cleaned and lubricated with Bestop's Zipper Cleaner (part no. 11206-00) will help prevent damage and keep the zippers in smooth working condition. If a zipper opens behind the slider, the slider may have been spread apart. This problem can usually

be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return slider to the end of the zipper in the normal Open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

For Bestop Warranty Information, Please go to;

https://www.bestop.com/help/warranty-information/



Normal Slider-Jaws Parallel

Damaged Slider-Jaws spread apart (Sometimes broken)

