


BX2231 Installation Instructions 2002-03 Honda Civic Si

Serial No.

The front fascia and headlights are removed for baseplate installation. Drilling is required. The BX8847 is available for this vehicle. Attachment Tabs are 23 inches center to center and a height of 14 inches.



1. Remove the four push pins from the top edge of fascia.

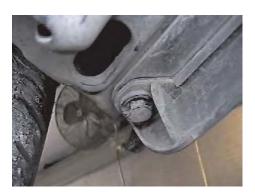

3. Remove one push pin just forward of front tire on bottom corner of fascia, both sides.



292-6208

5. Remove four push pins from the bottom edge of fascia and belly pan, pull fascia forward and set aside.



2. Using the 8MM socket, remove the metric bolt just forward of front tire on upper fascia corner, both sides.



4. Using the phillips screw driver, remove two screws from bottom edge of fascia just forward of front tires, both sides.



 Using the 10MM socket, remove two metric bolts from head light assembly.

Go RVing

© 2003 Blue Ox Division, Automatic Equipment Mfg. Co. • One Mill Road, Industrial Park Pender, Nebraska 68047 • Phone 402-385-3051 • Fax 402-385-3360 • www.blueox.us





7. Remove two metric bolts from the lower head light assembly with the 10MM socket, both sides. Pull head light assemblies forward, unplug and set aside.



9. Remove two metric bolts from the top and one metric bolt from the bottom of the metal bumper using a 13MM socket, both sides. Pull bumper forward and set aside. 2003 Model will need to use a 12MM socket.





8. While lifting baseplate up and 1/2" back from frame end, clamp onto the frame using the vise grips as shown in photo. Slide fascia into place to verify proper fit. Using the baseplate as a template, drill all holes with the 13/32" drill bit, both sides.



10. Using the flat chisel, remove welded nut on the inside of frame rail on the passenger's side.

Go RVing

11. Insert the two nut plates into frame opening to align with the two upper drilled holes. Tighten 3/8" bolts and lock washers. Be sure and use loctite on all bolts before tightening. Torque all bolts according to torque chart in the General Instruction sheet.

© 2003 Blue Ox Division, Automatic Equipment Mfg. Co. • One Mill Road, Industrial Park Pender, Nebraska 68047 • Phone 402-385-3051 • Fax 402-385-3360 • www.blueox.us

7/23/08





13. Install 3/8" bolt lock washer and hex nut into lower hole on both sides. Be sure and use loctite on all bolts before tightening. Torque all bolts according to torque chart in the General Instruction sheet.

14. Reinstall fascia and headlight assemblies. Be sure all electrical connections are plugged in properly.

- **15.** The dimensional variations between otherwise identical cars can be considerable. While the location and size of the holes in the baseplate were designed to allow for easy installation, it may be necessary to file a hole slightly to allow a bolt to clear.
- 16. Install the tow bar and safety cables according to the instructions included in their packages.
- **17.** Do **not** substitute other devices if the tow bar pin and clip are lost.

18. DEALER OR INSTALLER: BE CERTAIN THE USER RECEIVES THE INSTRUCTION SHEET.





Page 4 of 4

Tools Required

8MM Socket 10MM Socket 13MM Socket Loctite 9/16" Socket Phillips Screw Driver 13/32" Drill Bit Vise Grip Flat Chisel

0

0 0

Parts List

Description

Go RVing

ket. NO.	Qty.	Part No.	Description
1	1	61-5922	Weldment, Base Plate, BX2231
2	4		
3	6	201-0368	
4	6	203-0010	
5	2	202-0003	
6	2	201-0553	1/4-20 x 1/2 Hx. Wshd, Type F Screw
7	2	201-0192	#10-32 x 1/2 Slot, Rd. Hd. Screw
8	2	203-0054	#10 Lock Washer
9	2	202-0047	#10-32 Hex Nut
10	2	101-5822	Adapter, 4 Way Connector
11	2	62-3468	Attachment, Assembly, SF/ SB
	2	226-0046	Baseplate Safety Cable, 36" CL III (Not Shown)
	2	229-0359	Quicklink, 3/8, ZP (Not Shown)
	2	290-0437	Receiver, Cap Plug (BLK) (Not Shown)



Dort No

IMPORTANT: Use only genuine factory replacement parts on your Base Plate. Do not substitute homemade or nontypical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your Base Plate, be sure to use a replacement bolt of the same grade (Usually Grade 5, refer to parts list). Repair parts may be ordered through your nearest **Blue Ox** dealer or distributor.

7/23/08