

INSTALLATION MANUAL

45832

Level of Difficulty

Easy

Parts List

Qty	Description
1	D-ring shackle mount, 2" shank

Tools Required

None

Torque Specifications

7/8" shackle bolt 30 lb-ft.

Use above torque setting unless otherwise noted

Step 1

Slide the shank of the D-ring shackle mount into your vehicle's 2" receiver and align the hole in the shank with the hole in the receiver hitch.

Insert your hitch pin (sold separately) through the hitch and D-ring shank. Secure on the opposite side with the clip provided with your hitch pin. See diagram below.

Step 2

Secure your tow strap (sold separately) by feeding it through the opening in the shackle. Depending on the style and size of your tow strap, it may be necessary to remove the shackle from the shank. Remove the shackle by loosening the shackle bolt and reinstalling after hooking up the tow strap.

Note: Ensure the shackle bolt is fully threaded into the shackle after removal and reinstallation. Torque to 30 ft-lbs. The end of the bolt should be flush with the outside of the shackle when re-installed.

WARNING

Failure to fully tighten the shackle bolt may result in loss of attachment, property damage or personal injury.

Product Registration

CURT stands behind our products with industry-leading warranties. Provide feedback and help us to improve our products by registering your purchase at: warranty.curtgroup.com/surveys

WARNING

Do not modify this product in any way. Unauthorized modification may impair the function and / or safety and could affect the life of the product and void the warranty.

Rated for 13,000 lbs. straight-line pull. Never exceed the rated capacity of the product, vehicle's defined Gross Combined Weight Rating (GCWR) or hitch receiver rating.

Product is designed only for vehicle recovery and must not be used for towing.

Product Photo



CAUTION

Check for damaged parts before each use. Carefully check that the product will operate properly and perform its intended function. Replace damaged or worn parts immediately. Never operate the product with a damaged part.

NOTICE

Before you begin installation, read all instructions thoroughly.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.


Reference vehicle owner's manual for weight ratings and capacities prior to use.

Maintenance

Inspect the unit for proper operation and worn, damaged or missing parts. Replace as required or when the unit's wear exceeds 1/8" from the original surface.

Periodically apply a small amount of grease or anti-seize to the shackle bolt threads.

Installation Diagram

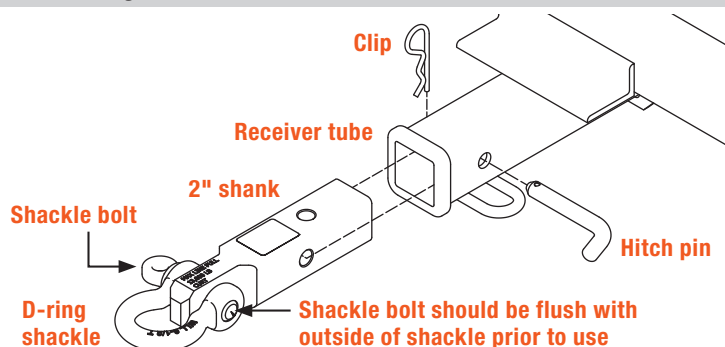

Hitch pin & clip sold separately