

# INSTALLATION MANUAL

# 48330


## Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

## Parts List

| Item | Qty | Description    |
|------|-----|----------------|
| 1    | 4   | Hex nut, 1/2"  |
| 2    | 4   | Washer, 1/2"   |
| 3    | 4   | Hex bolt, 1/2" |

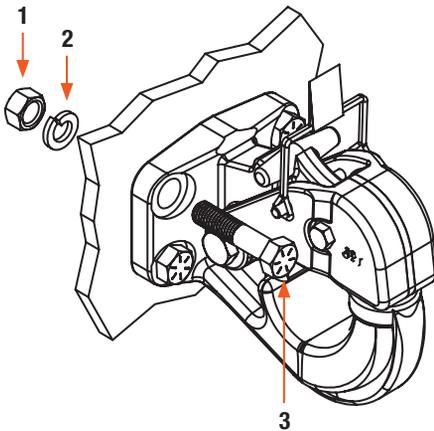

## Tools Required

|              |         |
|--------------|---------|
| Socket, 3/4" | Ratchet |
| Wrench, 3/4" | --      |

## Torque Specifications

|   |             |
|---|-------------|
| 1/2" bolt                                       | 90 ft.-lbs. |
| Use above torque setting unless otherwise noted |             |

## Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: [warranty.curtgroup.com/surveys](http://warranty.curtgroup.com/surveys)

## WARNING

Vehicle performance (braking, handling, acceleration, turning radius) can be drastically affected by towing a trailer. Allow additional time and space for stopping, changing lanes, passing and turning.

Do not tow more than one trailer at a time


Severe bumps can damage your towing system. Avoid or drive slowly over rough terrain

Do not damage the latch when using a pintle mount.

Be particularly careful with a drawbar when coupling and uncoupling

Never exceed the vehicle manufacturer's recommended towing capacity.

## Product Photo

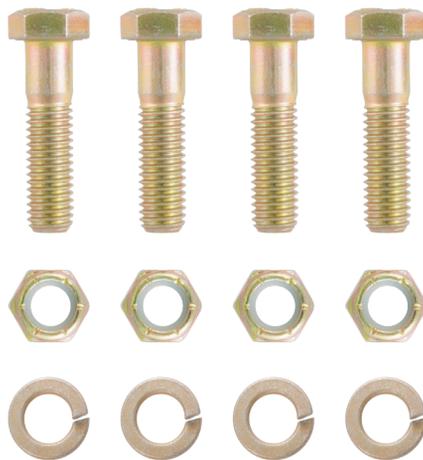

## NOTICE

Visit [www.curtmfg.com](http://www.curtmfg.com) for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

## Mounting Instructions

Mounting structure must be capable of supporting the rated pintle hook capacity in accordance with SAE J847.

Only use CURT supplied mounting hardware and refer to the torque specifications in this manual.