56171 HYUNDAI AZERA

WIRING LOCATION GUIDE **GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS**



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

IDEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filetée.

3/14/2013

English

1. Open the trunk of the vehicle and remove the floor coverings and rear scuff panel by removing the plastic fasteners holding it in place (A,B). Pull back on the felt trunk liner locate the taillight wiring harness connectors on the back of the taillight housing (C). The connectors will be similar to those on the T-Connector harness.

2. Beginning on the driver's side separate the vehicle harness connector from the drivers side taillight, taking care not to damage the locking tabs (D). Insert the T-Connector end with the yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the T-Connector end with the green wire behind the removed scuff panel to the passenger side. Repeat step 2 on the passenger side using the green wire.

4. Locate a suitable grounding point near the in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

6. Adhere the black converter box behind the felt trunk liner using the double-sided tape provided. Secure any loose parts of the T-Connector with the cable ties provided.

7. Route the 4-flat out from under the felt trunk liner and secure in a convenient out of the way location. When in use route to the center of the vehicle and out of the trunk.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

WARNING:

Mount converter module inside the tow vehicle or in a protected area similar to a vehicle interior. Failure to mount the module in a protected area can cause loss of warranty, product failure including lamp malfunction, overheating and potential fire.

IMPORTANT: Battery connection must be fuse protected, 10 amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed lower of tow vehicle lamp load rating or:

Signal circuits – 3.0 amps per side Tail / Running Lights - 6.0 amps total

Check vehicle owner's manual or contact vehicle manufacturer for more information.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813





