

# INSTALLATION INSTRUCTIONS

**WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY**


## WEIGHT DISTRIBUTION HEAD ANGLE ADJUSTMENT KIT



### UNIT VIEW

See below for each detailed view. **NOTE:** There are long and short rods, with three options of use for each one.


Drop distance is the measurement from the top of the shank to the bottom of the spring bar. See figure below.

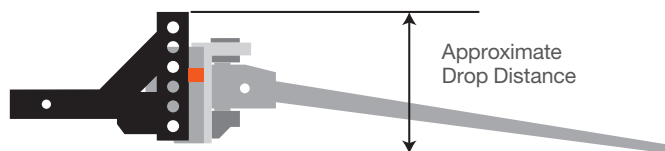

### SHORT ADJUSTMENT ROD


#### Short Rod Only

Drop distance = 8.8 inches

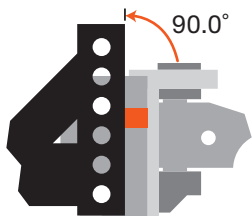


#### Short Rod + 1 Flat Washer

Drop distance = 10 inches

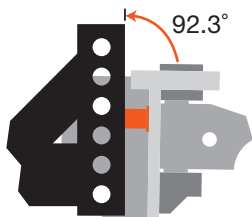

#### Short Rod + 2 Flat Washers


Drop distance = 11.3 inches

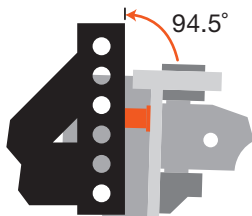

### LONG ADJUSTMENT ROD


#### Long Rod Only

Drop distance = 12.6 inches

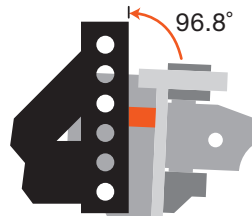

#### Long Rod + 1 Flat Washer

Drop distance = 13.9 inches

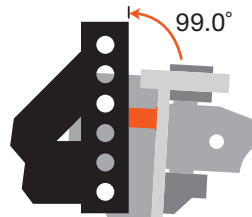

#### Long Rod + 2 Flat Washers

Drop distance = 15.2 inches

