

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING


SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR
PART #TR42-2

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

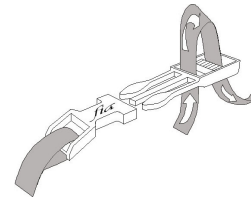

NOTE: SEATS WITH REMOVABLE HEADRESTS:

- remove headrest (if unable to remove consult your auto dealership)
- slit hole(s) into the stretch fabric to accommodate the headrest post(s)

THE STRETCH FABRIC WILL NOT RUN.

BACKREST COVER:

1. unlatch backrest and slip cover over pulling down firmly
2. tuck flap under backrest and attach to velcro at back

CUSHION COVER:

1. centre cover on the seat
2. pull seat cover tightly side to side so that the front and back flaps tuck under seat
3. pass the front straps under the seat and buckle to back flap
4. pass side straps around the back of seat and buckle
5. adjust all straps/buckles and velcro to equalize tension for a uniform fit

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone: (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.ca