

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-22/ Oe32-22/ SL62-22/ SP82-22/ TR42-22/ TRS42-22



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – 60 PORTION (X 1):

- | | |
|--|---|
| 1) Remove head rest (see note) | 6) Attach velcro for lower seat belt opening |
| 2) Open zipper | 7) Install adhesive back Velcro (supplied) on inside edge of "armrest well" to align with Velcro on seat cover. NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED. |
| 3) Detach Velcro for lower seat belt opening | 8) Tuck flaps through crevice under backrest and attach to Velcro at back |
| 4) Slip cover over backrest under seat belt. Seat cover has openings for headrest posts. | 9) Adjust velcro to equalize tension |
| 5) Close zipper (see note) | 10) Replace headrests |

B) BACKREST COVER – 40 PORTION (X 1):

- | | |
|---|---|
| 1) Remove head rest (see note) | 3) Tuck flaps through crevice under backrest and attach to Velcro at back |
| 2) Slip cover over backrest. Seat cover has openings for headrest posts | 4) Adjust Velcro to equalize tension |
| | 5) Replace headrests (see note) |

C) CUSHION COVER (X 2):

 
- | | |
|-------------------------------------|--|
| 1) Center cover on the seat | 3) Lift seat and attach straps to buckles |
| 2) Pass the front straps under seat | 4) Adjust straps and buckles to equalize tension |

D) ARMREST COVER (X 1):

- | | |
|-----------------|--|
| 1) Open armrest | 2) Slip cover over armrest and attach Velcro |
|-----------------|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

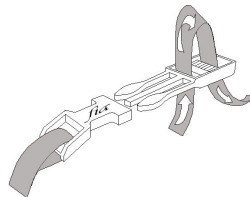


3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

2) HEAD REST REMOVAL:

 - Insert paper clip into holes at base to release headrest from posts
- Lift off

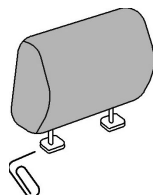

4) RE-INSTALLATION OF HEAD RESTS:

- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

5) HEADREST COVERS

Some models may contain more than one set of headrest covers. Select the ones that fit your headrests best.

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com