

If you have any comments or concerns,
 please feel free to contact our
 customer service department at:
 Toll-free: 1-800-835-0438
 OR
 Email: info@gofia.com


SEAT COVERS
 BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

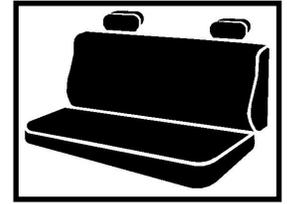

INSTALLATION INSTRUCTIONS
 FOR

NP92-28/ OE32-28/ SL62-28/ SP82-28/ TR42-28/ TRS42-28

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest under center seat belt.. Holding cushion up in ¾ position allows for better access
- 3) With seat cushion in down position, smooth cover from top to bottom
- 4) Feed the back straps behind the seat so they go all the way down.
 Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. (see note)

- 5) Reach through crevice where backrest and cushion meet. Bring straps forward and buckle at the front of the cover
- 6) Tuck bottom of cover through crevice under backrest and tighten all straps
- 7) Locate bottom right flap through crevice and hold at back of seat
 With other hand bring the side flap around and attach (see note)
- 8) Repeat on left side
- 9) Adjust all straps, buckles and velcro


B) CUSHION COVER:

- 1) Center cover on the seat
- 2) Tuck back flap through crevice
- 3) Lift seat and pass the front strap under seat and buckle

- 4) Pass side straps around the back of seat and buckle
- 5) Adjust straps and buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

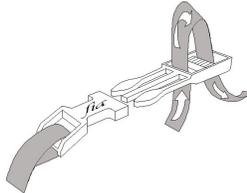


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
 - Lift off

OR

- B) - Push in side release buttons
 - Lift off
 (If unable to remove consult dealership)

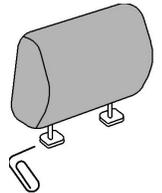

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

4) FEEDING BACK STRAPS ON BACKREST



5) BOTTOM FLAP INSTALLATION



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

