If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS BY





THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR

Oe32-29/ SL62-29/ SP82-29

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER - 40 PORTION:

- 1) Remove headrest (see note)
- 2) Remove plastic cargo cover from behind the seat by pushing side release button where metal post is and lift off. Repeat on other side.
- 3) Slip cover over backrest and place latch through opening provided.
- 4) Pull down firmly and tuck bottom of cover through crevice
- 5) Unlatch backrest and fold down flat
- 6) Bring bottom of cover from crevice and velcro to back of seat cover

B) BACKREST COVER - 60 PORTION:

- 1) Remove headrest (see note)
- 2) Undo zipper and velcro on cover
- 3) Slip cover over backrest and place latch through opening provided
- 4) Ensure cover is under center seat belt strap and armrest is through opening in cover
- 5) Tuck bottom flap on cover behind armrest and velcro
- 6) Pull down firmly and tuck bottom of cover through crevice
- 7) Tuck side velcro on cover through opening.
- 8) Unlatch backrest and fold down flat.
- 9) Apply velcro on back carpet of backrest
- 10 Close zipper and bring bottom cover from crevice and velcro to back of seat cover

C) ARMREST COVER:

- 1) Undo velcro on cover
- 2) Slip cover over armrest and velcro. Cover has opening for pull tab
- 3) For a cleaner look around the cup holder we suggest tucking the material between the plastic cup holder and armrest

D) CUSHION COVER:

- 1) Bring backrest to up position and seat to most forward position
- 2) Center seat cover over cushion and pull down side panel
- 3) Place seat belt buckle through opening provided
- 4) Slip car seat hook up on each side close to the door through opening provided
- 5) Tuck back flap with long strap through crevice
- 6) Unlatch backrests and fold down flat

- 7) Pass all straps under the seat to the front. (See note below)
- 8) Bring backrest to up position and seat to most back position
- 9) Reach strap under cushion and buckle to front and side of cover
- 10) Adjust all velcro and straps to equalize tension
- 11) Replace plastic cargo cover behind the seat
- 12) Replace headrests (see note)

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

2) HEAD REST REMOVAL:

Insert paper clip into hole in base of one post. Repeat on second post while holding head rest up. Remove headrest.. (If unable to remove consult dealership)



4) FEEDING BACK STRAPS UNDER SEAT CUSHION

Due to restricted space, some assistance may be required. A $4" \times 30"$ piece of cardboard with 2 slits at one end will simplify the placing of the straps. Thread the strap into the slits and slide under seat. The cardboard strip can be cut from the seat cover box. (see note)







WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com