

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia


FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-44/ Oe32-44/ SL62-44/ SP82-44/ TR42-44/ TRS42-44

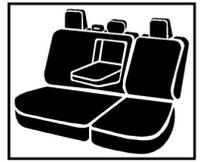

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – 60 PORTION:

- | | |
|---|-----------------------------------|
| 1) Remove head rest (see note) | 6) Fold down backrest |
| 2) Open zipper | 7) Close zipper (see note) |
| 3) Slip cover over backrest under center seat belt. | 8) Attach flaps to velcro at back |
| 4) Put armrest in down position | 9) Replace headrests (see note) |
| 5) Distribute the 12 pieces of self-adhesive velcro (supplied) evenly along the inside edge of the armrest well aligning with velcro on seat cover. NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED. | |

B) BACKREST COVER – 40 PORTION:

- | | |
|--|-----------------------------------|
| 1) Remove headrest (see note) | 4) Fold down backrest |
| 2) Slip cover over backrest | 5) Attach flaps to velcro at back |
| 3) Tuck flaps through crevice under backrest | 6) Replace headrest (see note) |

C) CUSHION COVER – 60 PORTION:

- | | |
|---|--|
| 1) Center cover on the seat | 4) Pass side and front straps under seat |
| 2) Line up opening in seat cover under seat belt buckle. (DO NOT put seat belt buckle through hole in seat cover.) | 5) Fold the backrest down flat and buckle straps at back |
| 3) Tuck the back part of the cushion cover through the seat crevice | |

D) CUSHION COVER – 40 PORTION:


- | | |
|-----------------------------|----------------------------------|
| 1) Center cover on the seat | 2) Repeat steps 3 – 5 from above |
|-----------------------------|----------------------------------|

E) ARMREST COVER

- | | |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

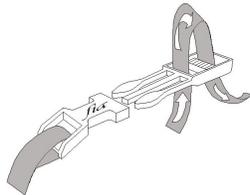

3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

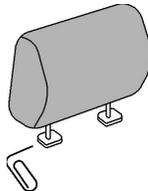

4) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com