

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia



SUPER-GRIP®

The slip resistant fastening system

NP92-71/ SL62-71/ SP82-71/ TR42-71/ TRS42-71

*Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **SUPER-GRIP BUCKLES** are self-locking. For proper usage, see diagram (1) below.*

Backrest Cover:


1. slip cover over backrest
2. smooth cover tightly from top to bottom
3. tuck flap into crevice
4. attach velcro to flap at back of seat cover

Cushion Cover:

1. center cover on cushion
2. tuck the back part of the cushion cover through the seat crevice
3. pass the front straps under the seat and secure to the center buckles
4. pass the side straps under the back corners of the seat and secure to the end buckles
5. adjust all straps/buckles to equalize the tension for a uniform fit

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

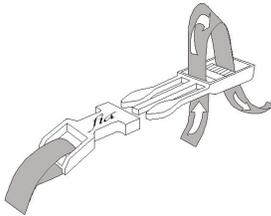

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com