


SEAT COVERS
BY



Featuring **SUPER-GRIP®**

THE SLIP RESISTANT FASTENING SYSTEM

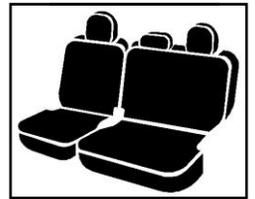

INSTALLATION INSTRUCTIONS

FOR

NP92-88/ Oe32-88/ SL62-88/ SP82-88/ TR42-88/ TRS42-88

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A. CUSHION COVERS

1. Center cover on seat
2. Tuck straps through crevice
3. Bring front and side stretch material down
4. Pass back strap under seat and buckle to front
5. pass side straps under seat and buckle across
6. Adjust straps and buckles to equalize tension

B. BACKREST COVER 40 SECTION


1. Remove headrest (see note)
2. Open side and bottom velcro on cover
3. Unlatch backrest, slip cover over backrest.
4. Pass bottom cover through crevice and place backrest in fold flat position
5. Close side velcro and pull bottom cover through crevice and velcro at back
6. Apply opposite side Velcro on backrest carpeting to hold its position
7. With backrest in up position, smooth cover from top to bottom. Adjust velcro if required
8. Replace headrest (see note)

C. BACKREST COVER 60 SECTION

1. Remove headrest (see note)
2. Open side and bottom velcro on cover
3. Open zipper on cover, slip cover over backrest.
4. Ensure cover is installed under seat belt
5. Pass bottom cover through crevice and place backrest in fold flat position
6. Close zipper and pull bottom cover through crevice and velcro at back
7. Close side Velcro and place opposite side pocket on backrest
8. Smooth cover from top to bottom. Adjust velcro if required
9. Replace headrest (see note)

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

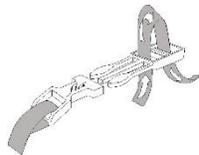


3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

2) HEAD REST REMOVAL:

- Push in side release buttons
 - Lift off
- (If unable to remove consult dealership)

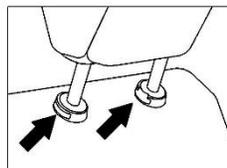

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

LIMITED 2 YEAR WARRANTY

Fia Inc. guarantees the original purchaser a limited 2 year warranty against manufacturer's defects in materials, workmanship and finish under normal use. The warranty is void if the product has been damaged resulting from product misuse, improper installation, product modifications or product neglect. The warranty applies to all Fia products and is limited to repair or replacement of the product. Warranty does not include cost of removal, installation, labor, freight and incidental or consequential damages.

Original purchaser must return defective merchandise along with the original purchase receipt to the original place of purchase for repair or replacement. Shipping charges will apply for any repair or replacement.

Buyer assumes all risk and liability whatsoever from the installation of Fia products. Vehicles equipped with supplemental restraint systems (air bags) deployed by impact should not be modified or covered by any aftermarket seat cover without consulting the vehicle manufacturer and Fia Inc. Fia Inc. assumes no liability for injury, loss, incidental or consequential damages in the event of an accident.