

If you have any comments or concerns,  
 please feel free to contact our  
 customer service department at:  
 Toll-free: 1-800-835-0438  
 OR  
 Email: info@gofia.com

SEAT COVERS  
 BY



The Leader in Custom Fit

FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**



INSTALLATION INSTRUCTIONS  
 FOR  
 Oe37-15/ SL67-15/ TR47-15

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

**INSTRUCTIONS:**

**A) BACKREST COVER - "40" PORTION:**

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1) Move seat to most forward position</li> <li>2) Remove head rest (see note)</li> <li>3) Slip cover over backrest – pull down firmly</li> </ol> | <ol style="list-style-type: none"> <li>4) Tuck flaps under backrest and attach to velcro at back</li> <li>6) Adjust velcro to equalize tension</li> <li>7) Replace headrests (see note)</li> </ol> |
|---|--|

**B) CUSHION COVER - "40" PORTION:**

- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1) Center cover on the seat</li> <li>2) Pass the front strap under seat and buckle</li> </ol> | <ol style="list-style-type: none"> <li>3) Pass side straps around back of seat and buckle</li> <li>4) Adjust straps and buckles to equalize tension</li> </ol> |
|--|--|

**C) CUSHION COVER – "60" PORTION:**

 
- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1) Align cover on seat and position seat belt through opening provided</li> <li>2) Pass the strap that is attached to the flap by the seat belt cut-out through the seat belt opening under the seat and secure with side strap buckle or flap buckle (see note)</li> <li>3) <b>For TR47-15 / Oe37-15 only.</b> <ol style="list-style-type: none"> <li>a) Seat <b>with built-in cup holder.</b> Pull down cup holder and position adhesive back velcro to align with velcro attached to back flap under top frame of cup holder</li> </ol> </li> </ol> | <ol style="list-style-type: none"> <li>b) Seat <b>without cup holder.</b> The back flap will adhere to back of seat without the use of adhesive back velcro</li> <li>4) Pass front strap under seat and buckle</li> <li>5) Pass side strap around the back of the seat and buckle</li> <li>6) Adjust straps and buckles to equalize tension</li> </ol> |
|---|--|

**D) ARMREST / STORAGE COMPARTMENT COVER**

- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1) Open armrest / storage compartment</li> <li>2) Center cover under armrest</li> <li>3) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged</li> </ol> | <ol style="list-style-type: none"> <li>4) Position adhesive backed velcro (supplied) to align with the velcro on cover. <b>NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.</b></li> <li>5) Secure the adhesive velcro on the inside back of console</li> </ol> |
|--|---|


**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

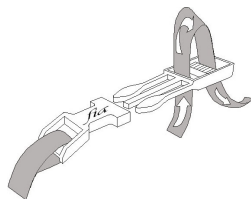

**2) HEAD REST REMOVAL:**

 
- A) - Insert paper clip into holes at base to release  
 - Lift off
- OR**
- B) - Push in side release buttons  
 - Lift off  
 (If unable to remove consult dealership)

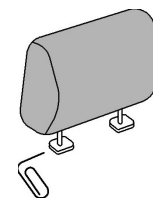

**3) RE-INSTALLATION OF HEADRESTS**

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

 **4)**

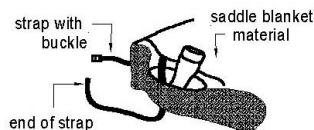

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

