

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

NP97-33/ Oe37-33/ SL67-33/ SP87-33/ TR47-33/ TRS47-33

**THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER –“40” PORTION X 2:**

- |   |                                      |
|---|--------------------------------------|
| 1) Remove head rest (see note)                            | 4) Adjust Velcro to equalize tension |
| 2) Slip cover over backrest. (see air bag warning below)  | 5) Replace headrests (see note)      |
| 3) Tuck flaps under backrest and attach to Velcro at back |                                      |

**B) CUSHION COVER –“40” PORTION X 2:**

- |   |  |
|---|--|
| 1) Align cover on seat and position seat belt buckle through opening provided | 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap |
| 2) Pass the back flap on the cover through the crevice                        | 5) Adjust straps and buckles to equalize tension   |
| 3) Pass the front strap under seat. Buckle to back flap                       |  |

**C) CUSHION COVER – “20” PORTION:**


- |   |   |
|---|---|
| 1) Open cushion lid to up position                        | 4) Open cushion lid to up position        |
| 2) Slip cover over lid, pull side Velcro and attach       | 5) Pull back flap and apply to carpet     |
| 3) With cushion lid close, pass back flap through crevice | 5) Snug and adjust Velcro for better fit. |

**D) BACKREST COVER – “20” PORTION**

- |   |  |
|---|--|
| 1) Remove headrest (see note)           | 3) Slip cover over backrest under seat belt and close zipper |
| 2) Undo Velcro on cover and open zipper | 4) Snug cover at back and attach Velcro                      |

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

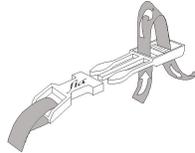

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
B) Replace headrests


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

(If unable to remove consult dealership)

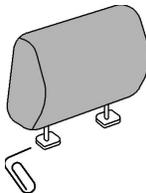

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

