

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY
fia
The Leader in Custom Fit
FEATURING
SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR
NP97-38, OE37-38, SL67-38, SP87-38, TR47-38, TRS47-38



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVERS

- 1) Slip cover on the seat, long strap on the door side and align edges.
- 2) Push flap and straps through the crevice and under back flap on seat (if applicable)
- 3) Pull straps to front of seat and attach to outside buckles.
- 4) Feed side strap under seat between plastic molding and seat. Attach to side buckle.


B) BACKREST COVERS

- 1) Remove headrest (see note below)
- 2) Slip cover over backrest (see warning below)
- 3) Push flap and straps through the crevice and under back flap on seat (if applicable)
- 4) Pull straps to front of seat and attach to corresponding buckles. (See note below)
- 5) Feed back strap under seat and attach to front center buckle.

AFTER INSTALLATION IS COMPLETE, CUSHION AND BACKREST, SMOOTH OUT COVER WHILE ADJUSTING STRAPS AND BUCKLES.

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

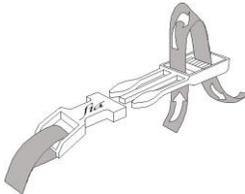


3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

2) HEAD REST REMOVAL:

- Push in side release buttons
 - Lift off
- (If unable to remove consult dealership)

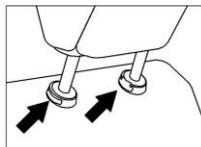

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

