If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS BY





THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR
Oe37-51/ SL67-51/ SP87-51

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

# A) CUSHION COVER

- 5) Buckle to back flap cover
- 6) Adjust straps and buckles to equalize tension

1) Center cover on the seat

3) Tuck flaps under backrest

2) Pass the front strap under the seat

1) Remove headrest (see note 2 below)

- 3) Buckle to back flap of seat cover
- 4) Pass side straps through the opening between the molded plastic and the seat and through the opening on the metal frame.

2) Slip cover over backrest (see air bag warning below)

# **B) BACKREST COVER**

- 4) Attach to velcro at back
- 5) Adjust velcro to equalize tension
- 6) Replace headrests (see note 3 below)

# NOTES:

# 1) SELF-LOCKING SUPER-GRIP® BUCKLE:



# 2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release
  - Lift off

#### OR

- B) Push in side release buttons
  - Lift off

(If unable to remove consult dealership)



# 3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

### WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com