

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia
The Leader in Custom Fit



FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR
Oe37-65/ SL67-65/ SP87-65/ TR47-65

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVER


- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing the plastic clip underneath the seat cushion
- 3) Place cover on seat cushion ensuring long side strap is on the door side
- 4) Pass back flap of cover with straps and velcro attached through crevice
- 5) Feed straps under seat and buckle to front of cushion cover
- 6) Pass the side strap through the opening between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Apply velcro on seat cover to the back of the seat cushion
- 9) Adjust straps and velcro to equalize tension

B) BACKREST COVER

- 1) Remove headrest (see note below)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass attached velcro strips through crevice and apply to back of seat cushion
- 4) Pass back flap of backrest (previously released) through opening on cover
- 5) Adjust straps and velcro to equalize tension
- 6) Re-install the plastic clip under the cushion
- 7) Replace headrest (see note below)

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

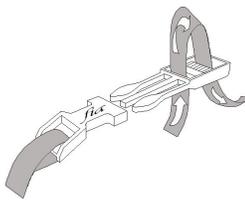

2) HEAD REST REMOVAL:

- Press in side release buttons
- Lift off

3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

01-16-13