

THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)

SEAT COVERS
BY

fia
The Leader in Custom Fit

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

NP99-15/ Oe39-15/ SL69-15/ SP89-15/ TR49-15/ TRS49-15

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Remove head rest (see note below)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly

A) BACKREST COVERS – “40” PORTIONS:

- 4) Tuck flaps through crevice and attach to Velcro at back
- 5) Replace headrests (see note below)

B) CUSHION COVERS – “40” PORTIONS:

- 1) Center cover on the seat
- 2) Pass the front strap under seat and buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat (for TR49-16, TR49-17, TR49-19, Oe39-16, Oe39-17, Oe39-19) **OR**
Pass side straps around back of seat (for TR49-15, TR49-20, Oe39-15, Oe39-20)

- 4) Buckle straps to back flap
- 5) Adjust straps and buckles to equalize tension

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged

C) BACKREST COVER – CENTER “20” PORTION:

- 4) Position adhesive back Velcro, supplied, to align with the velcro on cover.

NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.


- 1) Open cushion lid to up position
- 2) Center the cover on the seat
- 3) Tuck the back part of cushion cover through seat crevice

D) CUSHION COVER – CENTER “20”) PORTION:

- 4) Pass the side straps under back corners of seat and secure to the end buckles
- 5) Adjust straps/buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

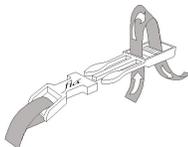


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)



3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com