

**THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER (SEE PICTURE ABOVE)**

SEAT COVERS  
BY

*fia*  
The Leader in Custom Fit

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: [info@gofia.com](mailto:info@gofia.com)

FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM  
INSTALLATION INSTRUCTIONS  
FOR  
Oe39-42/ SL69-42/ SP89-42/ TR49-42**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) CUSHION COVER – “40” PORTION**

- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing elastic from the plastic hook underneath the seat cushion
- 3) Place cover on seat cushion ensuring long side strap is on the door side
- 4) Pass back flap of cover through crevice
- 5) Feed straps under seat and buckle to front of cushion cover
- 6) Pass the side strap through the opening between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Adjust straps to equalize tension

**B) BACKREST COVER – “40” PORTION**

- 1) Remove headrest (see reverse)
- 2) Slip cover over backrest and pull down firmly (see air bag warning on reverse)
- 3) Pass attached velcro strips through crevice
- 4) Wrap velcro straps around spring under the seat. Fasten together
- 5) Adjust velcro to equalize tension
- 6) Pass back flap of backrest (previously released) through opening on cover
- 7) Re-install the elastic attached to the bottom back flap of the seat to the plastic hook under the seat
- 8) Replace headrest (see note below)

**C) BACKREST COVER – “20” PORTION**


- 1) Remove headrest (see note)
- 2) Open zipper
- 3) Place cover over backrest under seat belt
- 4) Close zipper (see note)
- 5) With armrest down, open storage compartment
- 6) Position adhesive back velcro (supplied) to align with the velcro on cover. **NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 7) Snug cover at back of storage compartment so the velcro on the cover is positioned through the crevice where the lid and storage compartment are hinged
- 8) Secure the velcro on the inside back of storage compartment
- 9) Adjust velcro to equalize tension

**D) CUSHION COVER – “20” PORTION**

- 1) Open cushion lid to up position
- 2) Center cover on the seat
- 3) Tuck the strap under cushion lid and attach to buckle on back flap
- 4) Place pull tab through allowance in seat cover
- 5) Pull side velcro pieces under cushion and attach together
- 6) Adjust strap and velcro to equalize tension


**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

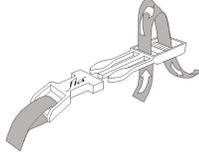

**2) HEAD REST REMOVAL:**

- Press in side release buttons

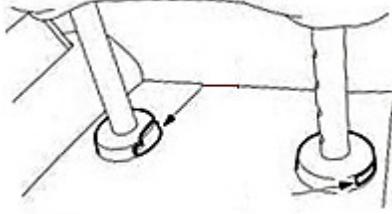

- Lift off

**3) RE-INSTALLATION OF HEADRESTS**

- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

**4) ZIPPERS:**

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

**WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com