

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY


fia
The Leader in Custom Fit

FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR**

NP99-44/ Oe39-44/ SL69-44/ SP89-44/ TR49-44/ TRS49-44

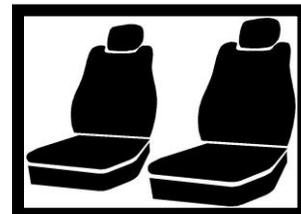

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVER


- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing elastic from the plastic hook underneath the seat cushion
- 3) Align cover on seat and position seat belt buckle through opening provided ensuring long side strap is on the door side
- 4) Pass back flap of cover through crevice
- 5) Feed straps under seat and attach to front center and two sides buckles of cover
- 6) Pass the side strap through the space between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Adjust straps to equalize tension

B) BACKREST COVER

- 1) Remove headrest (see below)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass long straps through crevice and attach to corresponding buckles of cushion cover.
- 4) Re-install the elastic attached to the bottom back flap of the seat to the plastic hook under the seat
- 5) Apply Velcro from stretch material to bottom bib of backrest
- 6) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit
- 7) Replace headrest (see note below)


NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

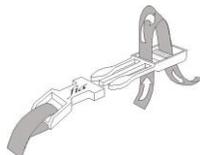

2) HEAD REST REMOVAL:

- Press in side release buttons
- Lift off

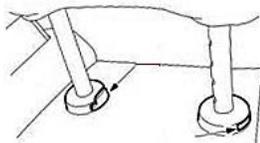

3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com