If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

**SEAT COVERS** 





# **SUPER-GRIP®**

THE SLIP RESISTANT FASTENING SYSTEM **INSTALLATION INSTRUCTIONS FOR** 

NP99-55/ Oe39-55/ SL69-55/ SP89-55/ TR49-55/ TRS49-55

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

### A) CUSHION COVER

- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing the plastic clip underneath the seat cushion
- 3) Place cover on seat cushion ensuring long side strap is on the door side
- 4) Pass back flap of cover through crevice
- 1) Remove headrest (see note below)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass straps through crevice and under backrest
- 4) Feed straps under seat and buckle to front of cushion (see note

- 5) Feed straps under seat and buckle to front of cushion cover (see note below)
- Pass the side strap through the opening between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Adjust straps to equalize tension

#### B) **BACKREST COVER**

- 5) Pass back flap of backrest (previously released) through opening on cover
- 6) Adjust straps and velcro to equalize tension
- 7) Re-install the plastic clip under the cushion
- 8) Replace headrest (see note below)

#### NOTES:

 
1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

- Press in side release buttons

- Lift off



#### 3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in
- Replace headrests

4) DUE TO RESTRICTED SPACE UNDER CUSHION, a 2" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. If desired, the strip can be cut from the seat cover box.





## WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com