


SEAT COVERS
BY
fia
The Leader in Custom Fit
FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR
NP99-75/ Oe39-75/ SL69-75/ SP89-75/ TR49-75/ TRS49-75

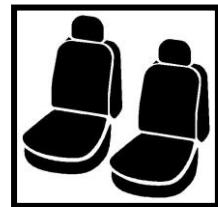

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. **FOR EASE IN INSTALLATION, PLEASE INSTALL CUSHION COVERS FIRST.**

CUSHION COVER - DRIVER SIDE

- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing elastic from the hook underneath the seat cushion
- 3) Locate cushion cover with openings on both sides
- 4) Place cover on seat cushion ensuring long side strap is on the door side (see note below)
- 5) Pass back flap/straps of cover through crevice
- 6) Feed straps under seat to front and attach to center and side buckles
- 7) Pass the long side strap around the back corner of the seat and buckle to the other side
- 8) Adjust all straps/buckles to equalize tension for a better fit

CUSHION COVER – PASSENGER SIDE


- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing elastic from the hook underneath the seat cushion
- 3) Place cover on seat cushion ensuring long side strap is on the door side
- 4) Pass back flap/straps of cover through crevice
- 5) Feed straps under seat to front and attach to center and side buckles
- 6) Pass the long side strap around the back corner of the seat and buckle to the other side
- 7) Adjust all straps/buckles to equalize tension for a better fit

BACKREST COVERS

- 1) Remove headrests (see note below)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass straps through crevice
- 4) Feed straps under seat to front cushion cover and attach buckles
- 5) Adjust all straps/buckles to equalize tension for a better fit
- 6) Re-install previously removed elastic from the hook underneath the seat cushion
- 7) Attach Velcro on cover to bottom carpeting of backrest
- 8) Re-install headrest (see note below)

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

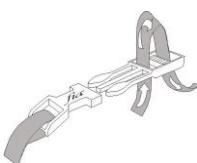

3) RE-INSTALLATION OF HEADRESTS

 
- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

4) DRIVER'S SIDE CUSHION COVER

- Place Lombard support adjustment knob through opening provided

2) HEAD REST REMOVAL:

- Press in side release buttons
- Lift off



WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com