

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.

**199R-9907**

**NOTICE:**

If the needle on this gauge is not set to zero, the gauge must be bled. To do this, simply locate the plug at the 5 o'clock position. Rotate the gauge so the plug is on top and lift the plug with your fingernail to release the excess air. The needle should then return to zero.