



**P/N 556-104
IGNITION COIL**

Part number 556-104 is a replacement coil for Holley EFI waste-fire distributorless ignition systems (DIS). A connector and pins are provided, if necessary.



The coil is wired as follows:

<u>Pin</u>	<u>Description</u>
A	Ground to "good" engine or chassis ground.
B	Ground to a "clean" ECU ground. On Holley HP and Dominator ECU's this would be Pin B14
C	5V ECU coil trigger. This is the trigger signal from the ECU. The ECU must provide a 5v trigger. See the Holley DIS manual for proper wiring to Holley HP and Dominator ECU's.
D	Connect directly to the battery +12v post. Use a 20A fuse between the coils and battery.

For proper spark plug wire routing, see the Holley DIS manual.

**Date: 7-16-10
199R10559**



**P/N 556-104
IGNITION COIL**

Part number 556-104 is a replacement coil for Holley EFI waste-fire distributorless ignition systems (DIS). A connector and pins are provided, if necessary.



The coil is wired as follows:

<u>Pin</u>	<u>Description</u>
A	Ground to "good" engine or chassis ground.
B	Ground to a "clean" ECU ground. On Holley HP and Dominator ECU's this would be Pin B14
C	5V ECU coil trigger. This is the trigger signal from the ECU. The ECU must provide a 5v trigger. See the Holley DIS manual for proper wiring to Holley HP and Dominator ECU's.
D	Connect directly to the battery +12v post. Use a 20A fuse between the coils and battery.

For proper spark plug wire routing, see the Holley DIS manual.

**Date: 7-16-10
199R10559**