



Installation Instructions:

The high temperature, one-piece oil pan gasket was designed to make the job of installing an oil pan gasket easier. To minimize the possibility of leaks, the following steps should be taken:

- 1. The oil pan and block must be clean and free of all dirt, oil, and old gasket material.
- 2. Both the block and oil pan must be checked for flatness.
- 3. All bolts and bolt holes must checked to ensure against thread damage. If damage has occurred, repair as needed.
- 4. Follow proper torque sequence (**Figure 1**).

NOTE: The one-piece oil pan gasket is equipped with crush limiters in each bolt hole to prevent over-torquing

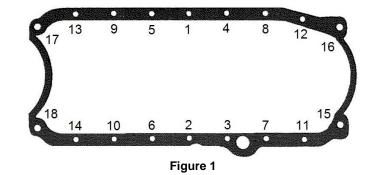

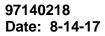




Installation Instructions:

The high temperature, one-piece oil pan gasket was designed to make the job of installing an oil pan gasket easier. To minimize the possibility of leaks, the following steps should be taken:

- 1. The oil pan and block must be clean and free of all dirt, oil, and old gasket material.
- 2. Both the block and oil pan must be checked for flatness.
- 3. All bolts and bolt holes must checked to ensure against thread damage. If damage has occurred, repair as needed.
- 4. Follow proper torque sequence (Figure 1).

NOTE: The one-piece oil pan gasket is equipped with crush limiters in each bolt hole to prevent over-torquing

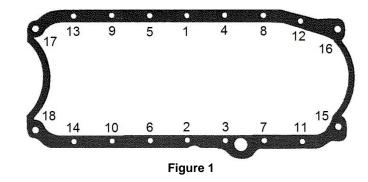

97140218 Date: 8-14-17