

MSD OPERATING INSTRUCTIONS

RPM Module Tester PN 89952

Parts Included:

1 - RPM Module Tester

1 - 9V Radio Battery

OPERATION

1. Insert RPM module into socket (Figure 1).
2. Push Button and hold.
3. RPM module value will be displayed.

EXTERNAL HARNESS

The external harness (Figure 1) is an RPM test plug factory set to 3,000 RPM. When plugged into the rev limiter socket of an MSD ignition box or an external rev limiter it will activate at 3,000 RPM to verify the rev limiter function.

The external harness can also be used as self test function of the 89952 RPM Module tester by plugging it into the socket of the tester. Once plugged in, push and hold the red button as if testing an RPM module. 3,000 RPM will be displayed on the screen ensuring both function and calibration of the unit.

If the battery is low the display will turn red and display to replace the battery.

To replace battery, use a small screwdriver to pry off the back of the unit (Figure 2). Replace battery and reinstall back of unit.


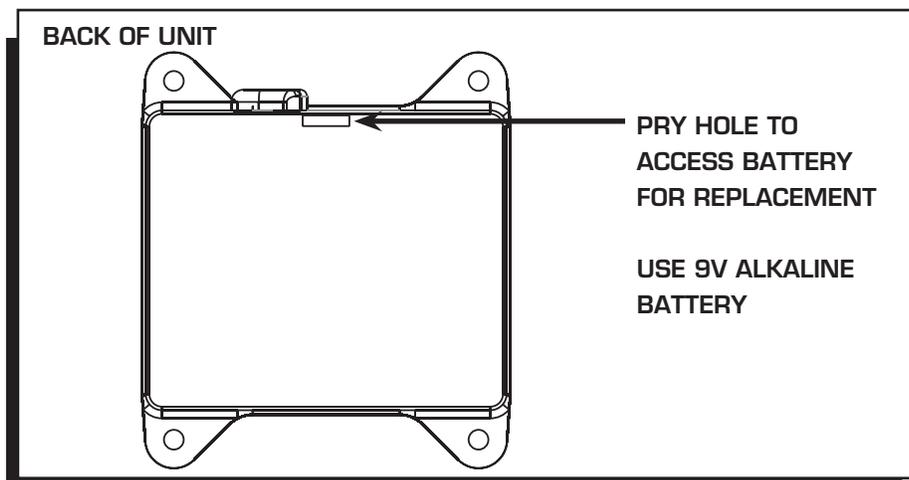


Figure 2 Back of PN 89952.

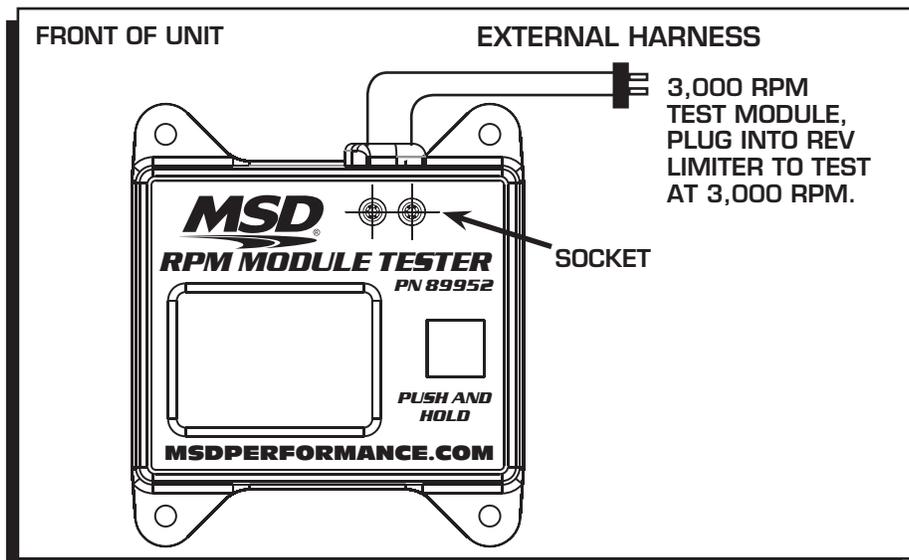