

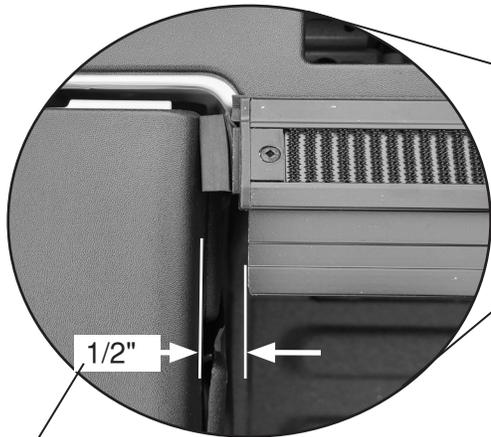


RAM MULTIFUNCTION SPLIT TAILGATE INSTRUCTION SHEET


1 Install the driver and passenger side rails with the six clamps provided.

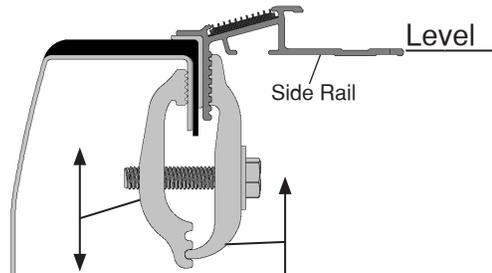

Side Rail Placement From The Tailgate.

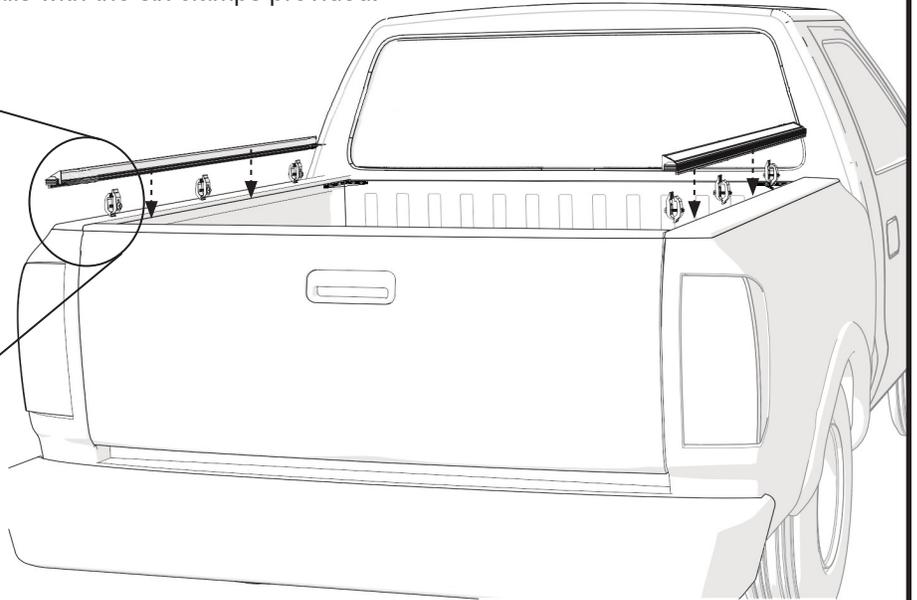

If side rail tilts up or down, Level the side rail tilt by adjusting clamps up or down as needed.

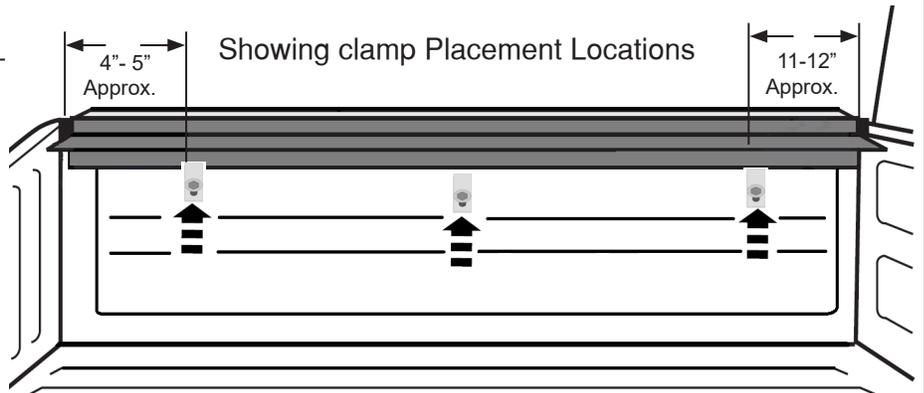


COVER INSTALLATION

Hardware Provided To Attach Cover Assembly:

1701580

 
(Qty. 2)



Hex Nut 3/8" Nylon Lock


1115745

(Qty. 2)

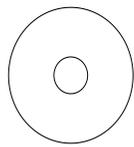

WASHER PLASTIC 1/4" X 1.50" RD_HDPE

 Tools Needed:



3/8" Ratchet




Ratchet Extension, Optional




1/2" SAE Deep Well Socket

2 Place the rolled up cover assembly near the front bulkhead as shown.

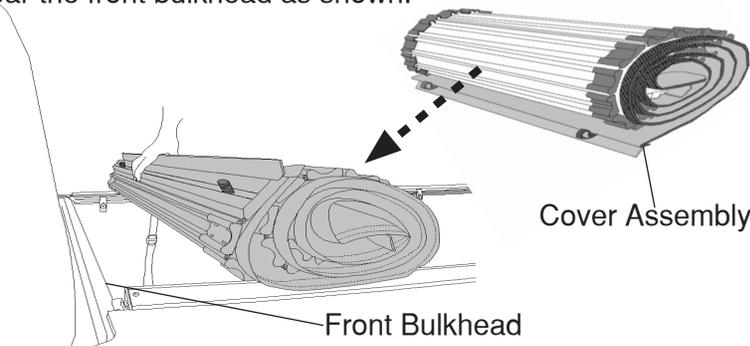

Rotate the front header over and align the screws with the holes in the side rails.

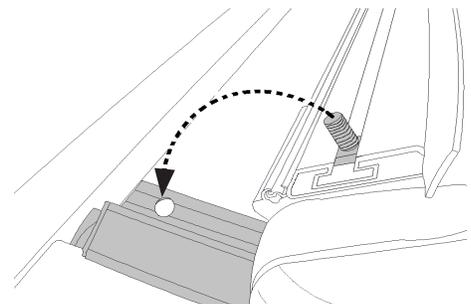


COVER INSTALLATION CONTINUED

- 3** At the front, Insert the black washer under the side rail and above the corner gusset frame.

Passenger Side Shown



- 4** Align the black washer's hole to the side rails oblong hole. Move the front header in place and align the screw in the header with the hole in the rail and washer. Drop the header down so the screw extends through the holes.

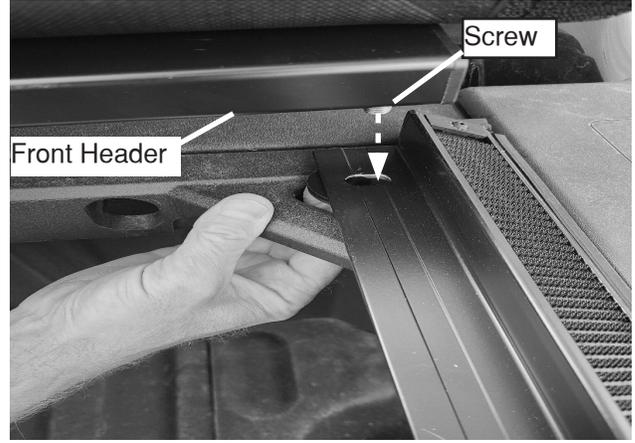

- 5** Repeat same process for the driver side.

Driver Side Shown




- 6** Repeat same process for the driver side.

Driver Side Shown

Front Header

Screw

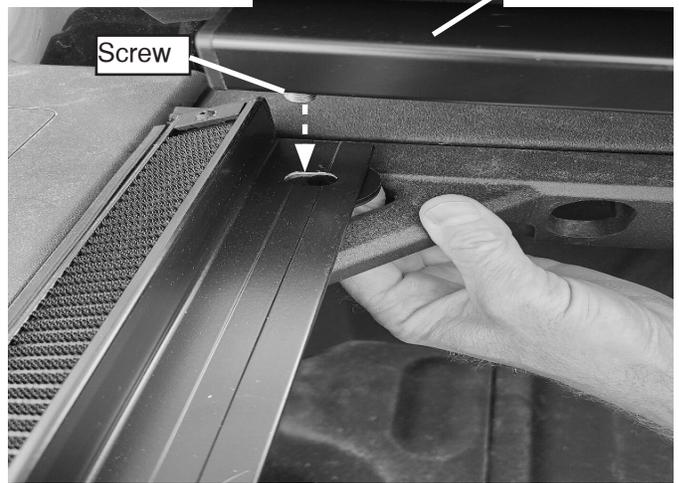

TROUBLESHOOTING TIPS


- 7** If socket doesn't fit on the fastener nut due to interference with the metal gusset, then reposition the rail rearward slightly.

Interference showing

Fix this by repositioning the rail rearward slightly. Refer to step one.



- 8** If the end seal becomes deformed after swinging the tailgate door shut then open and close the tailgate the normal way to straighten the end plug seal.

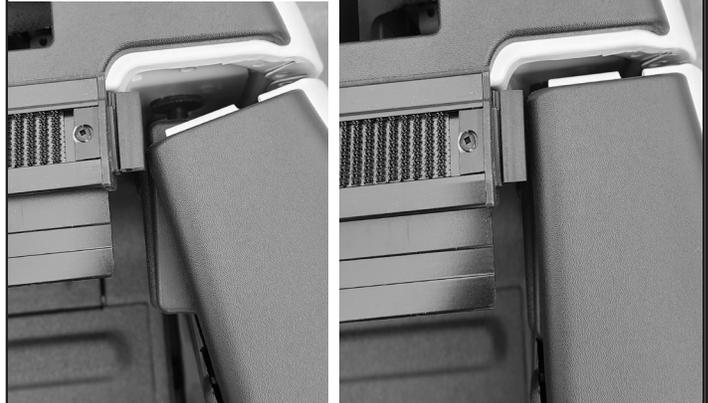

- 9** Refer to the main operating manual to review standard operating procedures and other important information related to your cover.