

Your safety, and the safety of others, is very important. To help you make informed decisions about safety, we have provided installation and operating instructions and other information on labels and in this guide. This information alerts you to potential hazards that could hurt you or others. It is not possible to warn you about all potential hazards associated with this product, you must use your own good judgment.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

This guide identifies potential hazards and has important safety messages that help you and others avoid personal injury or death. **WARNING** and **CAUTION** are signal words that identify the level of hazard. These signal words mean:

A WARNING signals a hazard that could cause serious injury or death, if you do not follow recommendations.

ACAUTION signals a hazard that may cause minor to moderate injury, if you do not follow recommendations. This guide uses **NOTICE** to call attention to important mechanical information, and **Note:** to emphasize general information worthy of special attention.

WARNING

SEVERE INJURY OR DEATH MAY RESULT IF YOU IGNORE ANY OF THE FOLLOWING.

- Read the Winch Operator's Manual, ATV Operator's Manual, and all warning labels before operating the winch and ATV.
- Stay clear of moving parts and cable. Keep others away when operating the winch.
- Inspect the winch mechanism, fasteners, and cable, before operating. Replace all worn or damaged parts before operating.
- Make sure the winch is deactivated when leaving the ATV unattended.

PARTS LIST:

PART NO.	QUANTITY	DESCRIPTION
39307	1	Mounting plate
39259	2	M10 X 1.25 X 20MM SOC HD CPSC
31175	2	¹ ⁄ ₄ -20 X 1 X 1 ³ ⁄ ₄ X 1 U-BOLT
1322	4	¹ ⁄4-20 HEX NUT
1321	4	¹ /4 LOCK WASHER

INSTRUCTIONS:

- 1. It is recommended that the skid pan be removed for installation of this winch mount.
- 2. Attach the mounting plate to the frame and front tube assembly, with the welded spacers facing down. Use the two 1/4-20 u-bolts, 1/4-20 hex nuts and lock washers in the rear and the M10 x 1.25 x 20mm socket head cap screws in the front two mounting holes. Do not tighten fasteners fully at this time. Refer to figure one and two.
- **3.** Attach the winch two the mounting plate with four 5\16-18 hex cap screws and lock washer supplied with the winch. The black fairlead plate that came with the winch is placed between the winch and the mounting plate. The fairlead window with the black cast hawse fairlead should be facing forward. Make sure the drum rotation label on the winch is facing forward.
- **4.** Tighten all fasteners securely at this time. Place the skid pan back into position and tighten securely.
- **5.** Make all electrical connections using the manual that came with the winch. Refer to instruction PN 65094 for motor rotation instructions if installing a 3.0ci winch.



FIGURE ONE

FIGURE TWO

