

INSTALLATION INSTRUCTIONS REAR A-ARM BODY ARMOR

Part Number: 83686

Application: 2009 POLARIS SPORTSMAN XP 550/850

Your safety, and the safety of others, is very important. To help you make informed decisions about safety, we have provided installation and operating instructions and other information on labels and in this guide. This information alerts you to potential hazards that could hurt you or others. It is not possible to warn you about all potential hazards associated with this product, you must use your own good judgment.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

This guide identifies potential hazards and has important safety messages that help you and others avoid personal injury or death. **WARNING** and **CAUTION** are signal words that identify the level of hazard. These signal words mean:

AWARNING signals a hazard that *could* cause serious injury or death, if you do not follow recommendations. ACAUTION signals a hazard that *may* cause minor to moderate injury, if you do not follow recommendations.

This guide uses **NOTICE** to call attention to important mechanical information, and **Note**: to emphasize general information worthy of special attention.

▲ WARNING					
INJURY HAZARD					
	Failure to observe these instructions could lead to severe injury or death.				
	Always Read all warning labels before operating.				
	Always use extreme caution when drilling on any vehicle. Make sure that all fuel lines, brake lines,				
	electrical wires, and other objects are not punctured or damaged when/if drilling on the vehicle.				
	Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any				
	objects that may be damaged. Failure to inspect the area to be drilled may result in vehicle damage,				
	electrical shock, fire or personal injury.				
	Always wear safety glasses when installing this kit. A drilling operation will cause flying metal				
	debris.				
	Always use extreme caution when cutting and trimming during fitting.				
	Always remove jewelry and wear eye protection.				
	Never lean over battery while making connections.				
	Always insure components will remain secure during installation and operation.				
	Always tighten all nuts and bolts securely, per the installation instructions.				
	Always inspect, tighten, and replace damaged hardware before use.				
	Always replace all worn or damaged parts before operating.				
	Never operate this WARN product with damaged or missing parts.				
	Never work under vehicle before properly securing vehicle.				

NOTICE

- · Product may affect airflow to vehicle engine and drivetrain components.
- · Installation of this accessory may affect vehicle warranty.
- This product will NOT protect vehicle from all impacts and terrain conditions.

ACaution

Moving Parts Entanglement Hazard


Failure to observe these instructions could lead to minor or moderate injury.

- Always take time to fully read and understand the installation and Operations Guide included with this product.
- **Never** operate this product if you are under 16 years of age.
- Never operate this product when under the influence of drugs, alcohol or medications.

Read installation and operating instructions thoroughly.

I. TABLE OF CONTENTS

Before You Begin	page 3
Parts List	page 3
Tools Required	page 3
Torque Specifications	page 3
Installation	page 4 - 6
Maintenance/Care	page 7

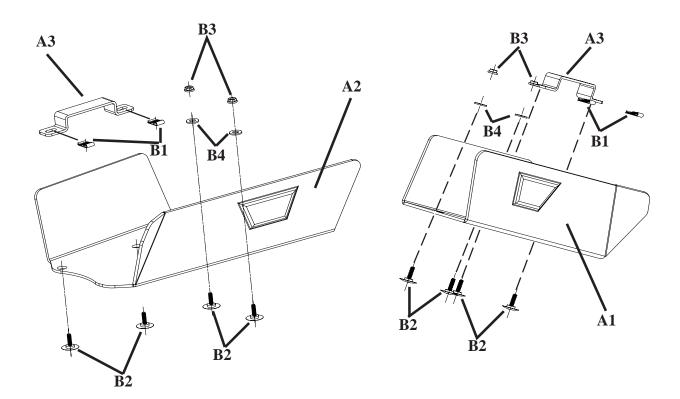

II. BEFORE YOU BEGIN

A Caution				
Injury Hazard				
Failure to observe these instructions could lead to injury.				
□ Part edges may be sharp!				

Installation tip:

- Apply electrical tape to clean dry vehicle components that will be in direct contact with aluminum skid plates. Tape will help protect painted finish against abrasion and can reduce tendency of squeaks.
- Raising the vehicle on a hoist or ramps may ease installation of this product.

III. PARTS LIST

<u>Reference</u>	Part Number	<u>Qty</u>	<u>Description</u>
A1	82368	1	Guard A-Arm Rear Right
A2	82369	1	Guard A-Arm Rear Left
A3	83312	2	A-Arm Support Bracket
B1	75344	4	U-Nut M6-1.0 screw
B2	75170	8	Screw M6-1.0 flange head
B3	37533	8	Flanged Hex Nut M6-1.0
B4	1324	4	Flat Washer

IV. TOOLS REQUIRED

- 10mm, hex wrench and or socket
- #30 Torx socket and driver

V. TORQUE SPECIFICATIONS

Fastener Size Torque lb.ft. (n-m)
M6 8 lb. ft. (10.8 N-m)

VI. INSTALLATION:

1. Place one of the rear a-arm guards (A1 or A2) into position over the vehicle a-arm assembly, figure 1.



Figure 1

2. Place 2 M6 u-nuts (B1) onto the rear a-arm support bracket (A3). Place the support bracket into position as indicated in figures 2 and 3. Attach the support bracket to the a-arm guard (A1 or A2) using 2 M6-1.0 flange head screws (B2), figures 2, 3 and 4. Do not tighten down the support bracket at this point, it may help in the installation to leave this loose at this time.



Figure 2

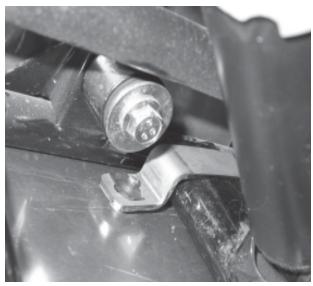


Figure 3

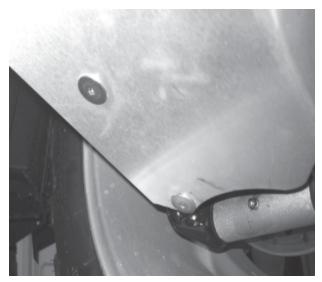


Figure 4

- The rear 2 attachment holes will line up with 2 holes in the vehicle a-arm assembly support bracket running between each side of the aarm assembly.
- 4. Run 2 of the M6-1.0 flange head hex screws up through the a-arm guard and into the support bracket. Place a flat washer on each screw and secure with the M6-1.0 flange head hex nut, figure 5.

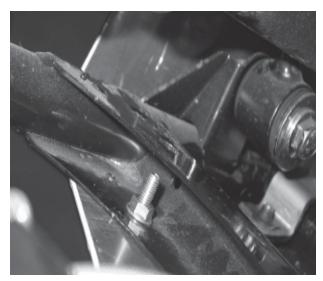


Figure 5

5. Tighten all fasterns at this point using the torque specifications on page 3. Installation is complete on one of the rear a-arms repeat procedure for the other side.

NOTE: Applying a small amount of thread lock will help insure M6 bolts will stay secure.



Figure 6

VII. MAINTENANCE/CARE

- Inspect all metal parts and related hardware. Replace all parts that appear corroded, cracked or deformed prior to use.
- Inspect all nuts and bolts and related hardware prior to each use. Tighten all nuts and bolts that appear to be loose. Stripped, fractured, or bent bolts or nuts need to be replaced immediately.
- Check skid plates protecting moving or rotating parts of the vehicle. Remove debris that may inhibit the
 part from moving freely. Removal of aluminum armor may be necessary to thoroughly clean and inspect
 both the vehicle and the aluminum underbody components. Frequency of removal will depend on the type
 of terrain conditions experienced. Regular cleaning will help keep product looking good and will help avoid
 damage to related components.

VIII. SERVICE PARTS

PN 75496 Kit Includes (10) PN 75170.

Contact Warn customer service with installation issues, comments, concerns, and questions.

WARN INDUSTRIES, INC

Customer Service Department 12900 SE Capps Road Clackamas, OR 97015 1-800-543-WARN (1-800-543-9276) 1-503-722-3005 International Fax www.warn.com