


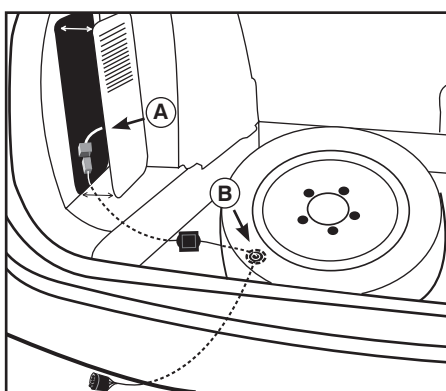

1. Locate vehicle's plug by removing the jack from the jack compartment on the driver's side (A).
2. Apply a small amount of grease to all electrical connections to help prevent corrosion.
3. Plug Wiring Kit into mating vehicle plug. Be sure the connectors are fully inserted with locking tabs in place.
4. Remove the rear trim panel, rear compartment storage cover, load floor and spare tire.
5. Route the rest of the harness under the spare tire and run the 4-wire flat out through the drain plug grommet (B).
6. Plug completed wire harness into the trailer connector.
7. Test all functions with engine running to ensure proper operation.

NOTE:

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.
- Converter load is a maximum of 2.1 amps per stop / turn signal terminal. (One turn signal on each side)

-
1. Localize el tapón del vehículo sacando el gato de su compartimiento en el lado del conductor (A).
 2. Aplique una pequeña cantidad de grasa a todas las conexiones eléctricas para prevenir la corrosión.
 3. Enchufe el kit del cableado en el enchufe acoplado del vehículo. Asegúrese que los conectores estén completamente insertados con las lengüetas sujetadoras en sitio.
 4. Quite la moldura del panel posterior, la cubierta trasera del compartimiento de almacenaje, el piso de carga y la llanta extra.
 5. Dirija el resto del arnes por abajo de la llanta extra y meta el conector plano de 4 cables al través del sello de hule de drenaje (B).
 6. Enchufe el arnés de cableado completo al conector del remolque.
 7. Para asegurar la operacín apropiada, compruebe todas las funciones con el motor funcionando.

NOTA:

- La aplicación regular de grasa a las terminales de los cables del remolque ayudará a prevenir la corrosión.
- Se puede requerir una señal de destello de alta potencia para eliminar que las luces destellen rápidamente.
- Siempre desconecte el conector del remolque de botes antes de retroceder el remolque dentro del agua.
- La carga máxima del convertidor es de 2.1 amperios por cada terminal con luz de alto y direccional. (Una luz direccional a cada lado)