


INSTRUCTIONS:

Loosen the set screw (A) on the connector and remove the socket from the housing. Route wiring through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway with housing key (B) and insert socket into housing. Tighten set screws.

NOTE: Locate wires on vehicle by function only. Color coding is not standard with all manufacturers.

CAUTION: Connect auxiliary power lead to fuse block or fused battery lead. 20 Amp.

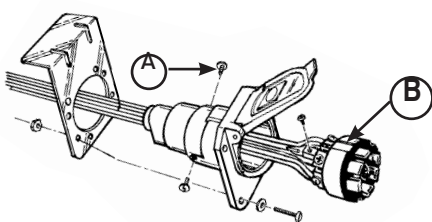


INSTRUCCIONES:

Afloje el tornillo (A) del conector y saque el enchufe. Dirija los cables a través del conector. Desforre los cables 1/4 de pulgada y asegúrelos firmemente a las terminales del enchufe. Alinee la ranura del enchufe con la del conector (B) e introduzca el enchufe dentro del conector. Ajuste el tornillo.

NOTA: Localice los cables del vehículo por su función solamente. El código de colores no es igual para todos los fabricantes.

PRECAUCIÓN: Conecte conductor de alimentación auxiliar a la caja de fusibles o al conductor de la batería con fusible. 20 A.

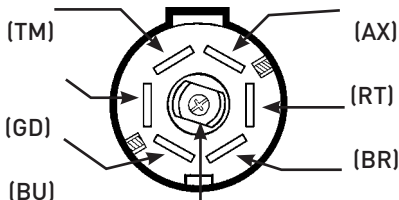

WIRE IDENTIFICATION IDENTIFICACIÓN DE LOS CABLES

(GD)	=	Ground / Tierra
(LT)	=	Left Turn / Direccional Izquierda
(TM)	=	Taillight / Luces traseras
(BU)	=	Backup / Reversa
(AX)	=	Auxiliary / Auxiliar
(RT)	=	Right Turn / Direccional Derecha
(BR)	=	Electric Brake / Eléctrico del Freno